



SIM7600G-H, SIM7600G-H miniPCIE User manual

LTE/HSPA/GSM/GNSS MODULE

SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633, Jinzhong Road
Changning District, Shanghai P.R. China

Tel: 86-21-31575100

support@simcom.com

www.simcom.com

| | |
|-----------------------------|------------------------|
| Document Title: | SIM7600G-H User manual |
| Version: | V1.03 |
| Date: | 2020-05-09 |
| Status: | Released |
| Document Control ID: | SIM7600G-H User manual |

GENERAL NOTES

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

IC Caution:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Ce matériel est complété par une exposition de rayonnements IC pour un environnement naturel. Ce matériel doit être installé et se faire avec une distance minimale de 20cm entre les radiateurs et les autresYour body shop.

For a host manufacturer's using a certified modular, if (1) the module's IC number is not visible when installed in the host, or (2) if the host is marketed so that end users do not have straightforward commonly used methods for access to remove the module so that the IC number of the module is visible; then an additional permanent label referring to the enclosed module: "Contains Transmitter Module IC: 23761-8PYA008" or "Contains IC: 23761-8PYA008" must be used.

This radio transmitter IC: 23761-8PYA008 has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Antenna List:

Type: Dipole antenna with non-standard SMA connector(50ohm);

Model: MF25D

Antenna Gain:

Band 2:1.87dBi, Band 4:3.12dBi, Band 5:0.91dBi, Band 12:0.95dBi,
Band 13:2.23dBi, Band 25:1.87dBi, Band 26:0.91dBi, Band 41:2.9dBi,
Band 66:3.12dBi

Single Module

Declaration of Conformity

SIMCom Wireless Solutions Limited, hereby declares that this LTE /HSPA/GSM/GNSS MODULE in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), This product is allowed to be used in all EU member states.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The modular can be installed or integrated in mobile or fix devices only. This modular cannot be installed in any portable device.

FCC Radiation Exposure Statement

This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled

environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This modular must be installed and operated with a minimum distance of 20 cm between the radiator and user body.

If the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following:
“Contains Transmitter Module FCC ID: 2AJYU-8PYA007 Or Contains FCC ID: 2AJYU-8PYA007”

When the module is installed inside another device, the user manual of the host must contain below warning statements;

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The devices must be installed and used in strict accordance with the manufacturer's instructions as described in the user documentation that comes with the product.

Any company of the host device which install this modular with Single modular approval should perform the test of radiated emission and spurious emission according to FCC part 15C : 15.247 and 15.209 requirement, Only if the test result comply with FCC part 15C : 15.247 and 15.209 requirement, then the host can be sold legally.

COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED. COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION, INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT, A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

manufacturer information:

SIMCom Wireless Solutions Limited
No.633, Jinzhong Rd, Changning Dist., Shanghai, P.R.China
Tel: +86 21 31575100
Email: simcom@simcom.com

For more information, please visit:

<https://www.simcom.com/download/list-863-en.html>

For technical support, or to report documentation errors, please visit:

<https://www.simcom.com/ask/> or email to: support@simcom.com

importer information:

importer Name : XXXX

importer Address:XXXX

Copyright © 2020 SIMCom Wireless Solutions Limited All Rights Reserved.

SIMCom
Confidential

Version History

| Date | Version | Description of change | Author |
|------------|---------|---|----------------------------|
| 2019-3-29 | 1.00 | Original | Xutao.Jiang |
| 2019-10-21 | 1.01 | Update current consumption | Xutao.Jiang |
| 2020-04-22 | 1.02 | Modify the Format | Xiong Yuqing |
| 2020-05-09 | 1.03 | Add Sim7600NA/NA-H frequency band Change Table 2 | Xutao.Jiang Qiang.Zhang |

SIMCom
Confidential

Contents

| | |
|--|-----------|
| Version History | 6 |
| Contents | 7 |
| Table Index | 9 |
| Figure Index | 11 |
| 1 Introduction | 13 |
| 1.1 Product Outline..... | 13 |
| 1.2 Hardware Interface Overview..... | 14 |
| 1.3 Functional Overview..... | 15 |
| 2 Package Information | 17 |
| 2.1 Pin Assignment Overview..... | 17 |
| 2.2 Pin Description..... | 20 |
| 2.3 Mechanical Information..... | 24 |
| 2.4 Footprint Recommendation..... | 25 |
| 3 Interface Application | 26 |
| 3.1 Power Supply..... | 26 |
| 3.1.1 Power Supply Design Guide..... | 27 |
| 3.1.2 Recommended Power Supply Circuit..... | 28 |
| 3.1.3 Voltage Monitor..... | 29 |
| 3.2 Power on/Power off/Reset Function..... | 30 |
| 3.2.1 Power on..... | 30 |
| 3.2.2 Power off..... | 31 |
| 3.2.3 Reset Function..... | 33 |
| 3.3 UART Interface..... | 34 |
| 3.3.1 UART Design Guide..... | 34 |
| 3.3.2 RI and DTR Behavior..... | 36 |
| 3.4 USB Interface..... | 37 |
| 3.5 HSIC interface..... | 38 |
| 3.6 SGMII Interface..... | 39 |
| 3.6.1 Reference schematic with AR8033..... | 39 |
| 3.6.2 Reference schematic with BCM89820..... | 40 |
| 3.7 USIM Interface..... | 40 |
| 3.7.1 USIM Application Guide..... | 41 |
| 3.8 PCM Interface..... | 43 |
| 3.8.1 PCM timing..... | 43 |
| 3.8.2 PCM Application Guide..... | 45 |
| 3.9 SD Interface..... | 45 |
| 3.10 I2C Interface..... | 47 |
| 3.11 SDIO Interface..... | 48 |

| | |
|---|-----------|
| 3.12 SPI Interface..... | 48 |
| 3.13 Network status..... | 49 |
| 3.14 Flight Mode Control..... | 50 |
| 3.15 Other interface..... | 51 |
| 3.15.1 Sink Current Source..... | 51 |
| 3.15.2 ADC..... | 52 |
| 3.15.3 LDO..... | 52 |
| 4 RF Specifications..... | 53 |
| 4.1. GSM/UMTS/LTE RF Specifications..... | 53 |
| 4.2. LTE Antenna Design Guide..... | 54 |
| 4.3. GNSS..... | 56 |
| 4.3.1 GNSS Technical specification..... | 56 |
| 4.3.2 GNSS Application Guide..... | 57 |
| 5 Electrical Specification..... | 59 |
| 5.1 Absolute maximum ratings..... | 59 |
| 5.2 Operating conditions..... | 59 |
| 5.3 Operating Mode..... | 60 |
| 5.3.1. Operating Mode Definition..... | 60 |
| 5.3.2. Sleep mode..... | 61 |
| 5.3.3. Minimum functionality mode and Flight mode..... | 62 |
| 5.4 Current Consumption..... | 62 |
| 5.5 ESD Notes..... | 63 |
| 6 SMT Production Guide..... | 64 |
| 6.1 Top and Bottom View of MODULE..... | 64 |
| 6.2 Label Information..... | 65 |
| 6.3 Typical SMT Reflow Profile..... | 65 |
| 6.4 Moisture Sensitivity Level (MSL)..... | 66 |
| 6.5 Stencil Foil Design Recommendation..... | 67 |
| 7 Packaging..... | 68 |
| 8 Appendix..... | 71 |
| 8.1 Coding Schemes and Maximum Net Data Rates over Air Interface..... | 71 |
| 8.2 Related Documents..... | 71 |
| 8.3 Terms and Abbreviations..... | 73 |
| 8.4 Safety Caution..... | 75 |

Table Index

| | |
|---|----|
| TABLE 1 : MODULE FREQUENCY BANDS..... | 13 |
| TABLE 2 : GENERAL FEATURES..... | 15 |
| TABLE 3 : PIN DEFINITION..... | 18 |
| TABLE 4 : IO PARAMETERS DEFINITION..... | 20 |
| TABLE 5 : PIN DESCRIPTION..... | 20 |
| TABLE 6 : VBAT PINS ELECTRONIC CHARACTERISTIC..... | 26 |
| TABLE 7 : RECOMMENDED TVS LIST..... | 28 |
| TABLE 8 : POWER ON TIMING AND ELECTRONIC CHARACTERISTIC..... | 31 |
| TABLE 9 : POWER OFF TIMING AND ELECTRONIC CHARACTERISTIC..... | 32 |
| TABLE 10 : RESET PIN ELECTRONIC CHARACTERISTIC..... | 33 |
| TABLE 11 : KEY DIFFERENCES BETWEEN HSIC AND HS-USB..... | 38 |
| TABLE 12 : USIM ELECTRONIC CHARACTERISTIC IN 1.8V MODE (USIM_VDD=1.8V)..... | 40 |
| TABLE 13 : USIM ELECTRONIC CHARACTERISTIC 3.0V MODE (USIM_VDD=2.95V)..... | 41 |
| TABLE 14 : AMPHENOL USIM SOCKET PIN DESCRIPTION..... | 43 |
| TABLE 15 : PCM FORMAT..... | 43 |
| TABLE 16 : PCM TIMING PARAMETERS..... | 44 |
| TABLE 17 : SD/MMC ELECTRONIC CHARACTERISTIC AS 2.85V (SD_DATA0-3, SD_CLK AND SD_CMD) | 45 |
| TABLE 18 : SD/MMC/EMMC ELECTRONIC CHARACTERISTIC AS 1.8V (SD_DATA0-3, SD_CLK AND SD_CMD) | 46 |
| TABLE 19 : NETLIGHT PIN STATUS..... | 49 |
| TABLE 20 : FLIGHTMODE PIN STATUS..... | 50 |
| TABLE 21 : SINK CURRENT ELECTRONIC CHARACTERISTIC..... | 51 |
| TABLE 22 : ADC1 AND ADC2 ELECTRONIC CHARACTERISTICS..... | 52 |
| TABLE 23 : ELECTRONIC CHARACTERISTIC..... | 52 |
| TABLE 24 : CONDUCTED TRANSMISSION POWER..... | 53 |
| TABLE 25 : OPERATING FREQUENCIES..... | 53 |
| TABLE 26 : E-UTRA OPERATING BANDS..... | 53 |
| TABLE 27 : CONDUCTED RECEIVE SENSITIVITY..... | 54 |
| TABLE 28 : REFERENCE SENSITIVITY (QPSK)..... | 54 |
| TABLE 29 : TRACE LOSS..... | 54 |
| TABLE 30 : RECOMMENDED TVS..... | 56 |
| TABLE 31 : ABSOLUTE MAXIMUM RATINGS..... | 59 |
| TABLE 32 : RECOMMENDED OPERATING RATINGS..... | 59 |
| TABLE 33 : 1.8V DIGITAL I/O CHARACTERISTICS* | 59 |
| TABLE 34 : OPERATING TEMPERATURE..... | 60 |
| TABLE 35 : OPERATING MODE DEFINITION..... | 61 |
| TABLE 36 : CURRENT CONSUMPTION ON VBAT PINS (VBAT=3.8V)..... | 62 |
| TABLE 37 : THE ESD PERFORMANCE MEASUREMENT TABLE (TEMPERATURE: 25°C, HUMIDITY: 45%)..... | 63 |
| TABLE 38 : THE DESCRIPTION OF LABEL INFORMATION..... | 65 |

| | |
|--|----|
| TABLE 39 : MOISTURE SENSITIVITY LEVEL AND FLOOR LIFE..... | 66 |
| TABLE 40 : TRAY SIZE..... | 68 |
| TABLE 41 : SMALL CARTON SIZE..... | 69 |
| TABLE 42 : BIG CARTON SIZE..... | 70 |
| TABLE 43 : CODING SCHEMES AND MAXIMUM NET DATA RATES OVER AIR INTERFACE..... | 71 |
| TABLE 44 : RELATED DOCUMENTS..... | 71 |
| TABLE 45 : TERMS AND ABBREVIATIONS..... | 73 |
| TABLE 46 : SAFETY CAUTION..... | 75 |

SIMCom
Confidential

Figure Index

| | |
|--|----|
| FIGURE 2 : PIN ASSIGNMENT OVERVIEW..... | 17 |
| FIGURE 3 : DIMENSIONS (UNIT: MM)..... | 24 |
| FIGURE 4 : FOOTPRINT RECOMMENDATION (UNIT: MM)..... | 25 |
| FIGURE 5 : VBAT VOLTAGE DROP DURING BURST EMISSION (GSM/GPRS)..... | 26 |
| FIGURE 6 : POWER SUPPLY APPLICATION CIRCUIT..... | 27 |
| FIGURE 7 : LINEAR REGULATOR REFERENCE CIRCUIT..... | 28 |
| FIGURE 8 : SWITCHING MODE POWER SUPPLY REFERENCE CIRCUIT..... | 29 |
| FIGURE 9 : REFERENCE POWER ON/OFF CIRCUIT..... | 30 |
| FIGURE 10 : POWER ON TIMING SEQUENCE..... | 31 |
| FIGURE 11 : POWER OFF TIMING SEQUENCE..... | 32 |
| FIGURE 12 : REFERENCE RESET CIRCUIT..... | 33 |
| FIGURE 13 : UART FULL MODEM..... | 34 |
| FIGURE 14 : UART NULL MODEM..... | 34 |
| FIGURE 15 : REFERENCE CIRCUIT OF LEVEL SHIFT..... | 35 |
| FIGURE 16 : LEVEL MATCHING CIRCUIT..... | 35 |
| FIGURE 17 : RI BEHAVIOUR (SMS AND URC REPORT) | 36 |
| FIGURE 18 : RI BEHAVIOUR (VOICE CALL) | 36 |
| FIGURE 19 : USB REFERENCE CIRCUIT..... | 37 |
| FIGURE 20 : REFERENCE SGMII CIRCUIT WITH AR8033..... | 39 |
| FIGURE 21 : REFERENCE SGMII CIRCUIT WITH BCM89820..... | 40 |
| FIGURE 22 : USIM INTERFACE REFERENCE CIRCUIT..... | 41 |
| FIGURE 23 : USIM INTERFACE REFERENCE CIRCUIT WITH USIM_DET..... | 42 |
| FIGURE 24 : AMPHENOL SIM CARD SOCKET..... | 43 |
| FIGURE 25 : PCM_SYNC TIMING..... | 44 |
| FIGURE 26 : EXT CODEC TO MODULE TIMING..... | 44 |
| FIGURE 27 : MODULE TO EXT CODEC TIMING..... | 44 |
| FIGURE 28 : AUDIO CODEC REFERENCE CIRCUIT..... | 45 |
| FIGURE 29 : SD REFERENCE CIRCUIT..... | 46 |
| FIGURE 30 : EMMC REFERENCE CIRCUIT..... | 47 |
| FIGURE 31 : I2C REFERENCE CIRCUIT..... | 48 |
| FIGURE 32 : NETLIGHT REFERENCE CIRCUIT..... | 49 |
| FIGURE 33 : FLIGHT MODE SWITCH REFERENCE CIRCUIT..... | 50 |
| FIGURE 34 : ISINK REFERENCE CIRCUIT..... | 51 |
| FIGURE 35 : ANTENNA MATCHING CIRCUIT (MAIN_ANT)..... | 55 |
| FIGURE 36 : ANTENNA MATCHING CIRCUIT (AUX_ANT)..... | 55 |
| FIGURE 37 : ACTIVE ANTENNA CIRCUIT..... | 57 |
| FIGURE 38 : PASSIVE ANTENNA CIRCUIT (DEFAULT)..... | 57 |
| FIGURE 39 : TOP AND BOTTOM VIEW OF MODULE..... | 64 |
| FIGURE 40 : LABEL INFORMATION..... | 65 |
| FIGURE 41 : THE RAMP-SOAK-SPIKE REFLOW PROFILE OF MODULE..... | 66 |
| FIGURE 42 : STENCIL FOIL..... | 68 |

| | |
|---------------------------------------|----|
| FIGURE 43 : PACKAGING DIAGRAM..... | 68 |
| FIGURE 44 : TRAY DRAWING..... | 68 |
| FIGURE 45 : SMALL CARTON DRAWING..... | 69 |
| FIGURE 46 : BIG CARTON DRAWING..... | 70 |

SIMCom
Confidential

1 Introduction

This document describes the electronic specifications, RF specifications, interfaces, mechanical characteristics and testing results of the SIMCom module. With the help of this document and other software application notes/user guides, users can understand and use module to design and develop applications quickly.

1.1 Product Outline

Aimed at the global market, the module support GSM, WCDMA, LTE-TDD and LTE-FDD. Users can choose the module according to the wireless network configuration. The supported radio frequency bands are described in the following table.

Table1: Module frequency bands

| Standard | Frequency | SIM7600G | SIM7600G-H | SIM7600NA | SIM7600NA-H |
|----------|-----------|----------|------------|-----------|-------------|
| GSM | 850MHz | | | | |
| | 900MHz | | | | |
| | 1800M Hz | | | | |
| | 1900M Hz | | | | |
| WCDMA | B1 | | | | |
| | B2 | | | | |
| | B4 | | | | |
| | B5 | | | | |
| | B6 | | | | |
| | B8 | | | | |
| | B19 | | | | |
| LTE | FDD B1 | | | | |
| | FDD B2 | √ | √ | √ | √ |
| | FDD B3 | | | | |
| | FDD B4 | √ | √ | √ | √ |
| | FDD B5 | √ | √ | √ | √ |
| | FDD B7 | | | | |
| | FDD B8 | | | | |
| | FDD B12 | √ | √ | √ | √ |
| | FDD B13 | √ | √ | √ | √ |

| | | | | | |
|----------|---------|------|------|------|------|
| | FDD B14 | | | √ | √ |
| | FDD B18 | | | | |
| | FDD B19 | | | | |
| | FDD B20 | | | | |
| | FDD B25 | √ | √ | √ | √ |
| | FDD B26 | √ | √ | √ | √ |
| | FDD B28 | | | | |
| | FDD B66 | √ | √ | √ | √ |
| | FDD B71 | | | √ | √ |
| | TDD B34 | | | | |
| | TDD B38 | | | | |
| | TDD B39 | | | | |
| | TDD B40 | | | | |
| | TDD B41 | √ | √ | √ | √ |
| Category | | CAT1 | CAT4 | CAT1 | CAT4 |

With a small physical dimension of 30*30*2.9 mm and with the functions integrated, the module can meet almost any space requirement in users' applications, such as smart phone, PDA, industrial handheld, machine-to-machine and vehicle application, etc.

1.2 Hardware Interface Overview

The interfaces are described in detail in the next chapters include:

- Power Supply
- USB2.0 Interface
- UART Interface
- MMC/SD Interface
- SDIO Interface
- USIM Interface
- SPI Interface
- GPIO
- ADC
- LDO Power Output
- Current Sink Source
- PCM Interface
- SPI Interface
- I2C Interface
- HSIC Interface
- SGMII Interface

1.3 Functional Overview

Table2: General features

| Feature | Implementation |
|------------------------------|---|
| Power supply | Single supply voltage 3.4~4.2V, Recommend supply voltage 3.8V |
| Power saving | Current in sleep mode : <5mA |
| Radio frequency bands | Please refer to the table 1 |
| Transmitting power | LTE power class: 3 (24+1/-2dBm) |
| Data Transmission Throughput | LTE CAT 4 :150 Mbps (DL) 50 Mbps (UL) |
| Antenna | LTE main antenna. LTE auxiliary antenna GNSS antenna |
| GNSS | GNSS engine (GPS, GLONASS, BD, QZSS and GALILEO) Protocol: NMEA 0183 |
| SMS | MT, MO, CB, Text and PDU mode SMS storage: USIM card or ME(default) Transmission of SMS alternatively over CS or PS. |
| USIM interface | Support identity card: 1.8V/ 3V |
| USIM application toolkit | Support SAT class 3, GSM 11.14 Release 98 Support USAT |
| Phonebook management | Support phonebook types: DC, MC, RC, SM, ME, FD, ON, LD, EN |
| Audio feature | Support PCM interface Only support PCM master mode and short frame sync, 16-bit linear data formats |
| UART interface | A full modem serial port by default Baud rate: 300bps to 4Mbps(default:115200bps) Autobauding baud rate: 9600,19200,38400,57600,115200bps Can be used as the AT commands or data stream channel Support RTS/CTS hardware handshake Multiplex ability according to GSM 07.10 Multiplexer Protocol |
| MMC/SD | Support MMC and SD cards with 2.85 V on SD port |
| SDIO | Support SDIO with 1.8 V only on SDIO port |
| USB | USB 2.0 high speed interface, Can used be send AT command, Software update, GNSS NMEA, USB voice function etc. |
| Firmware upgrade | Firmware upgrade over USB interface or FOTA |
| Physical characteristics | Size:30*30*2.9m Weight:5.7 g |
| Temperature range | Normal operation temperature: -30°C to +80°C Extended operation temperature: -40°C to +85°C* Storage temperature -45°C to +90°C |
| antenna type | Dipole(SMA connector) |

| | |
|-------------------|--|
| max. output power | <p>LTE Band 2: 23.20 dBm LTE Band 4: 23.67 dBm LTE Band 5: 25.30 dBm LTE Band 12: 24.35 dBm LTE Band 13: 22.06 dBm LTE Band 25: 23.46 dBm LTE Band 26: 24.16 dBm LTE Band 41: 23.16 dBm LTE Band 66: 23.08 dBm</p> |
| frequency range | <p>Tx: LTE Band2:1850~1910MHz,LTE Band4:1710MHz~1755MHz LTE Band5:824~849MHz,LTE Band12:699~716MHz LTE Band13:777~787MHz,LTE Band25:1850~1915MHz LTE Band26:814~849MHz,LTE Band41:2496MHz~2690MHz LTE Band66:1710MHz~1780MHz</p> <p>Rx: LTE Band2:1930~1990MHz,LTE Band4:2110MHz~2155MHz LTE Band5:869~894MHz,LTE Band12:729~746MHz LTE Band13:746~756MHz,LTE Band25:1930~1995MHz LTE Band26:859~894MHz,LTE Band41:2496MHz~2690MHz LTE Band66:2110MHz~2200MHz</p> <p>GPS: 1575.42MHz; BDS: 1559MHz~1563MHz</p> |

NOTE able to make and receive voice calls, data calls, SMS and make LTE traffic in -40°C ~ +85°C. The performance will be reduced slightly from the 3GPP specifications if the temperature is outside the normal operating temperature range and still within the extreme operating temperature range.

2 Package Information

2.1 Pin Assignment Overview

All functions of the MODULE will be provided through 135 pads that will be connected to the users' platform. The following Figure is a high-level view of the pin assignment of the MODULE.

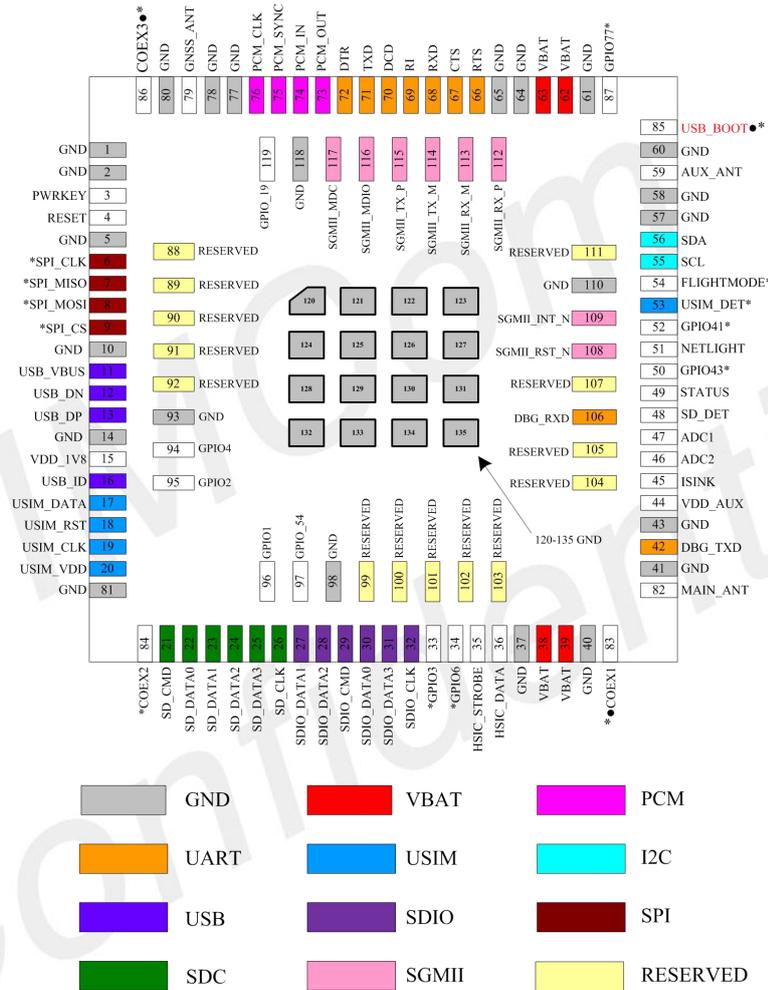


Table3: Pin definition

| Pin No. | Pin name | Pin No. | Pin name |
|---------|-------------|---------|-------------|
| 1 | GND | 2 | GND |
| 3 | PWRKEY | 4 | RESET |
| 5 | GND | 6 | SPI_CLK* |
| 7 | SPI_MISO* | 8 | SPI_MOSI* |
| 9 | SPI_CS* | 10 | GND |
| 11 | USB_VBUS | 12 | USB_DN |
| 13 | USB_DP | 14 | GND |
| 15 | VDD_1V8 | 16 | USB_ID |
| 17 | USIM_DATA | 18 | USIM_RST |
| 19 | USIM_CLK | 20 | USIM_VDD |
| 21 | SD_CMD | 22 | SD_DATA0 |
| 23 | SD_DATA1 | 24 | SD_DATA2 |
| 25 | SD_DATA3 | 26 | SD_CLK |
| 27 | SDIO_DATA1 | 28 | SDIO_DATA2 |
| 29 | SDIO_CMD | 30 | SDIO_DATA0 |
| 31 | SDIO_DATA3 | 32 | SDIO_CLK |
| 33 | GPIO3* | 34 | GPIO6* |
| 35 | HSIC_STROBE | 36 | HSIC_DATA |
| 37 | GND | 38 | VBAT |
| 39 | VBAT | 40 | GND |
| 41 | GND | 42 | DBG_TXD |
| 43 | GND | 44 | VDD_AUX |
| 45 | ISINK | 46 | ADC2 |
| 47 | ADC1 | 48 | SD_DET |
| 49 | STATUS | 50 | GPIO43* |
| 51 | NETLIGHT | 52 | GPIO41* |
| 53 | USIM_DET* | 54 | FLIGHTMODE* |
| 55 | SCL | 56 | SDA |
| 57 | GND | 58 | GND |
| 59 | AUX_ANT | 60 | GND |
| 61 | GND | 62 | VBAT |
| 63 | VBAT | 64 | GND |
| 65 | GND | 66 | RTS |
| 67 | CTS | 68 | RXD |
| 69 | RI | 70 | DCD |
| 71 | TXD | 72 | DTR |
| 73 | PCM_OUT | 74 | PCM_IN |
| 75 | PCM_SYNC | 76 | PCM_CLK |

| | | | |
|-----|-------------|-----|-------------|
| 77 | GND | 78 | GND |
| 79 | GNSS_ANT | 80 | GND |
| 81 | GND | 82 | MAIN_ANT |
| 83 | COEX1.* | 84 | COEX2* |
| 85 | BOOT_CFG0.* | 86 | COEX3.* |
| 87 | GPIO77 | 88 | RESERVED |
| 89 | RESERVED | 90 | RESERVED |
| 91 | RESERVED | 92 | RESERVED |
| 93 | GND | 94 | GPIO4 |
| 95 | GPIO2 | 96 | GPIO1 |
| 97 | GPIO_54 | 98 | GND |
| 99 | RESERVED | 100 | RESERVED |
| 101 | RESERVED | 102 | RESERVED |
| 103 | RESERVED | 104 | RESERVED |
| 105 | RESERVED | 106 | DBG_RXD |
| 107 | RESERVED | 108 | SGMII_RST_N |
| 109 | SGMII_INT_N | 110 | GND |
| 111 | RESERVED | 112 | SGMII_RX_P |
| 113 | SGMII_RX_M | 114 | SGMII_TX_M |
| 115 | SGMII_TX_P | 116 | SGMII_MDIO |
| 117 | SGMII_MDC | 118 | GND |
| 119 | GPIO_19 | 120 | GND |
| 121 | GND | 122 | GND |
| 123 | GND | 124 | GND |
| 125 | GND | 126 | GND |
| 127 | GND | 128 | GND |
| 129 | GND | 130 | GND |
| 131 | GND | 132 | GND |
| 133 | GND | 134 | GND |
| 135 | GND | | |

NOTE

- Means Before the normal power up, COEX1, COEX3 or BOOT_CFG0 cannot be pulled up, otherwise module will not be powered up normally.

* Means that pins has MUX function.

2.2 Pin Description

Table 4: IO parameters definition

| Pin type | Description |
|----------|--------------------------------|
| PI | Power input |
| PO | Power output |
| AI | Analog input |
| AIO | Analog input/output |
| I/O | Bidirectional input /output |
| DI | Digital input |
| DO | Digital output |
| DOH | Digital output with high level |
| DOL | Digital output with low level |
| PU | Pull up |
| PD | Pull down |

Table 5: Pin description

| Pin name | Pin No. | Default status | Description | Comment |
|---------------------|---|----------------|--|---|
| Power supply | | | | |
| VBAT | 38,39, 62,63 | PI | Power supply, voltage range: 3.4~4.2V. | |
| VDD_AUX | 44 | PO | LDO power output for other external circuits with Max 150mA current output. Its output voltage is 2.85V by default. (The voltage can be configured from 1.7V to 3.05V by AT command) . | If used SGMII function ,this pin used for SGMII function. If unused, keep it open. |
| VDD_1V8 | 15 | PO | 1.8 output with Max 50mA current output for external circuit, such as level shift circuit. | If unused, keep it open. |
| GND | 1,2,5, 10,14,37, 40,41,43, 57,58,60, 61,64,65, 77,78,80, 81,93,96, 110,118,1 20,121,1 22,123,1 24,125,1 26,127,1 28,129,1 30,131,1 32,133,1 | | Ground | |

34135

System Control

| | | | | |
|--------|---|--------|--|--|
| PWRKEY | 3 | DI,PU | System power on/off control input, active low. | The high voltage is 0.8V; |
| RESET | 4 | DI, PU | System reset control input, active low. | RESET has been pulled up to 1.8V via 40Kohm resistor internally. |

SD interface

| | | | | |
|----------|----|--------|---|----------------------------|
| SD_CMD | 21 | I/O,PD | SDIO command | If unused, keep them open. |
| SD_DATA0 | 22 | I/O,PD | SDIO data | |
| SD_DATA1 | 23 | I/O,PD | | |
| SD_DATA2 | 24 | I/O,PD | | |
| SD_DATA3 | 25 | I/O,PD | | |
| SD_CLK | 26 | DO | SDIO clock | |
| SD_DET | 48 | DI,PU | SD card insertion detect H: SD card is removed L: SD card is inserted | |

USIM interface

| | | | | |
|-----------|----|--------|--|--|
| USIM_DATA | 17 | I/O,PU | USIM Card data I/O, which has been pulled up via a 10KR resistor to USIM_VDD internally. Do not pull it up or down externally. | All lines of USIM interface should be protected against ESD. |
| USIM_RST | 18 | DO,PD | USIM Reset | |
| USIM_CLK | 19 | DO,PD | USIM clock | |
| USIM_VDD | 20 | PO,PD | Power output for USIM card, its output Voltage depends on USIM card type automatically. Its output current is up to 50mA. | |

SPI interface

| | | | | |
|-----------|---|----|------------------------------|---|
| SPI_CLK* | 6 | DO | SPI clock output | Default SPI Optional: BT uart function |
| SPI_MISO* | 7 | DI | SPI master in/slave out data | |
| SPI_MOSI* | 8 | DO | SPI master out/slave in data | |
| SPI_CS* | 9 | DO | SPI chip-select output | |

USB

| | | | | |
|----------|----|--------|---|---------------|
| USB_VBUS | 11 | AI | Valid USB detection input with 3.0~5.25V detection voltage | |
| USB_DN | 12 | AI, AO | Negative line of the differential, bi-directional USB signal. | |
| USB_DP | 13 | AI, AO | Positive line of the differential, bi-directional USB signal. | |
| USB_ID | 16 | AI | High-speed USB ID input | Keep it open. |

SGMII interface

| | | | | |
|------------|-----|----|---------------------------|----------------------------|
| SGMII_RX_P | 112 | AI | SGMII receive – positive | If unused, keep them open. |
| SGMII_RX_M | 113 | AI | SGMII receive - negative | |
| SGMII_TX_M | 114 | AO | SGMII transmit - negative | |

| | | | | |
|-------------|-----|-------|------------------------------------|---|
| SGMII_TX_P | 115 | AO | SGMII transmit– positive | |
| SGMII_RST_N | 108 | DO | Ethernet PHY reset | External 1.5K pull-up resistor from 3.3V/2.5V to MDIO_DATA and 10K pull-up resistor from VDD_1V8 to ETH_INT_N are needed when the Ethernet PHY is connected. If unused, please keep them open. |
| SGMII_INT_N | 109 | DI,PU | Ethernet PHY interrupt | |
| SGMII_MDIO | 116 | DIO | Management data input/output-data | |
| SGMII_MDC | 117 | DO | Management data input/output-clock | |

UART interface

| | | | | |
|-----|----|-------|-----------------|----------------------------|
| RTS | 66 | DOH | Request to send | If unused, keep them open. |
| CTS | 67 | DI | Clear to Send | |
| RXD | 68 | DI | Receive Data | |
| RI | 69 | DOH | Ring Indicator | |
| DCD | 70 | DOH | Carrier detects | |
| TXD | 71 | DOH | Transmit Data | |
| DTR | 72 | DI,PU | DTE get ready | |

DBG_UART

| | | | | |
|---------|-----|----|------------|----------------------------|
| DBG_TXD | 42 | DO | Log output | If unused, keep them open. |
| DBG_RXD | 106 | DI | Log input | |

I2C interface

| | | | | |
|-----|----|----|-----------------------|---|
| SCL | 55 | OD | I2C clock output | If unused, keep open, or else pull them up via 2.2KΩ resistors to 1.8V. |
| SDA | 56 | OD | I2C data input/output | |

SDIO interface

| | | | | |
|------------|----|-----|--------------|--|
| SDIO_DATA1 | 27 | I/O | SDIO data1 | It can be used for WLAN function. If unused, please keep them open. |
| SDIO_DATA2 | 28 | I/O | SDIO data2 | |
| SDIO_CMD | 29 | I/O | SDIO command | |
| SDIO_DATA0 | 30 | I/O | SDIO data0 | |
| SDIO_DATA3 | 31 | I/O | SDIO data3 | |
| SDIO_CLK | 32 | DO | SDIO clock | |

HSIC interface

| | | | | |
|-------------|----|-----|--------------------|---|
| HSIC_STROBE | 35 | I/O | HSIC strobe wakeup | <i>If use, please refer to document [27]</i> Otherwise please keep them open. |
| HSIC_DATA | 36 | I/O | HSIC data | |

PCM interface

| | | | | |
|----------|----|--------|-----------------------------|-----------------------------------|
| PCM_OUT | 73 | DO,PD | PCM data output. | If unused, please keep them open. |
| PCM_IN | 74 | DI,PD | PCM data input. | |
| PCM_SYNC | 75 | I/O,PD | PCM data frame sync signal. | |

| | | | | |
|-------------------------------|---|--------|---|---|
| PCM_CLK | 76 | I/O,PU | PCM data bit clock. | |
| GPIO | | | | |
| NETLIGHT | 51 | DO,PU | LED control output as network status indication. | If unused, keep them open. |
| STATUS | 49 | DO,PU | Operating status output. High level: Power on and firmware ready Low level: Power off | |
| GPIO4 | 94 | IO,PD | Default: GPIO | |
| GPIO2 | 95 | IO,PD | Default: GPIO | |
| GPIO1 | 96 | IO,PD | Default: GPIO | |
| GPIO_54 | 97 | IO,PD | Default: GPIO | |
| GPIO_19 | 119 | IO,PD | Default: GPIO | |
| RF interface | | | | |
| MAIN_ANT | 82 | AIO | MAIN antenna soldering pad | |
| GNSS_ANT | 79 | AI | GNSS antenna soldering pad | |
| AUX_ANT | 59 | AI | Auxiliary antenna soldering pad | |
| Other interface | | | | |
| ISINK | 45 | PI | Ground-referenced current sink. | If unused, please keep them open. |
| ADC1 | 47 | AI | Analog-digital converter input 1 | |
| ADC2 | 46 | AI | Analog-digital converter input 2 | |
| RESERVED | 88,89,90, 91,92,99, 100,101, 102,103, 104,105, 107,111 | | Reserved for future use | Please keep them open. |
| Mux function interface | | | | |
| COEX1* | 83 | I/O | RF synchronizing between Wi-Fi and LTE. | Default:COEX1* Option:WLAN_EN. |
| COEX2* | 84 | I/O | RFsynchronizing between Wi-Fi and LTE. | Default:COEX2* Option: WoWWAN. |
| COEX3* | 86 | I/O | RF synchronizing between Wi-Fi and LTE. | Default:COEX3* Option:BT_PCM_CLK. |
| BOOT_CFG0* | 85 | DI,PD | Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. | Default: BOOT_CFG0* Option:COEX_RXD*. Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP! |
| FLIGHTMODE* | 54 | DI,PU | Flight Mode control input. High level(or open): Normal Mode Low level: Flight Mode | Default: FLIGHTMODE* Option:BT_PCM_IN. |
| GPIO3* | 33 | IO | GPIO | Default:GPIO3* Option:WL_PWR_EN. |

3 Interface Application

3.1 Power Supply

The power supply pins of MODULE include 4 pins (pin 62&63, pin 38&39) named VBAT.

The 4 VBAT pads supply the power to RF and baseband circuits directly. On VBAT pads, the ripple current up to 2A typically, due to GSM/GPRS emission burst (every 4.615ms), may cause voltage drop. So the power supply for these pads must be able to provide sufficient current up to more than 2A in order to avoid the voltage drop is more than 300mV.

The following figure shows the VBAT voltage ripple wave at the maximum power transmit phase.

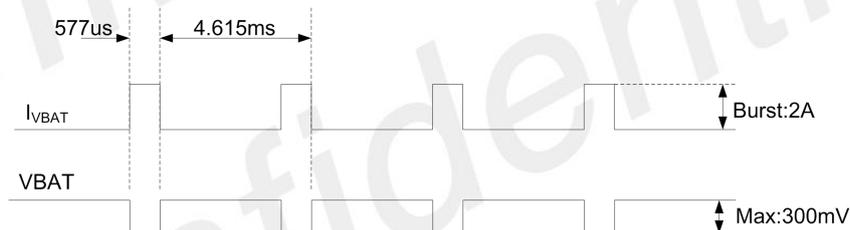


Figure 5: VBAT voltage drop during burst emission (GSM/GPRS)

NOTE

The test condition: The voltage of power supply for VBAT is 3.8V, Cd=100 μ F tantalum capacitor (ESR=0.7 Ω) and Cf=100nF (Please refer to Figure 6—Application circuit).

Table 6: VBAT pins electronic characteristic

| Symbol | Description | Min. | Typ. | Max. | Unit |
|------------------------------|---|------------------------------|------|------|---------|
| VBAT | Module power voltage | 3.4 | 3.8 | 4.2 | V |
| I _{VBAT(peak)} | Module power peak current in normal mode. | - | 2 | - | A |
| I _{VBAT(average)} | Module power average current in normal mode | Please refer to the table 34 | | | |
| I _{VBAT(sleep)} | Power supply current in sleep mode | | | | |
| I _{VBAT(power-off)} | Module power current in power off mode. | - | - | 20 | μ A |

3.1.1 Power Supply Design Guide

Make sure that the voltage on the VBAT pins will never drop below 3.4V, even during a transmit burst, when current consumption may rise up to 2A. If the voltage drops below 3.4V, the RF performance may be affected.

NOTE

If the power supply for VBAT pins can support up to 2A, more than 300uF capacitors are recommended. Otherwise users must use a total of 1000uF capacitors typically, in order to avoid of the voltage drop more than 300mV.

Some multi-layer ceramic chip (MLCC) capacitors (0.1/1uF) with low ESR in high frequency band can be used for EMC.

These capacitors should be put as close as possible to VBAT pads. Also, users should keep VBAT trace on circuit board wider than 2 mm to minimize PCB trace impedance. The following figure shows the recommended circuit.

Recommend Bead for vbat filter are BLM21PG300SN1D and MPZ2012S221A.

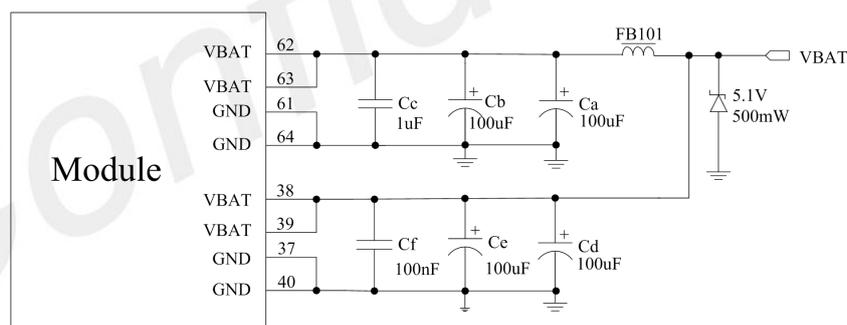


Figure 6: Power supply application circuit

In addition, in order to guard for over voltage protection, it is suggested to use TVS.

NOTE

user could only power pin 62, 63 or only power pin 38, 39, for these pins are connected inside the MODULE.

Table 7: Recommended TVS list

| No. | Manufacturer | Part Number | Power dissipation | Package |
|-----|--------------|----------------|-------------------|------------|
| 1 | JCET | ESDBW5V0A1 | 5V | DFN1006-2L |
| 2 | WAYON | WS05DPF-B | 5V | DFN1006-2L |
| 3 | WILLSEMI | ESD5611N | 5V | DFN1006-2L |
| 4 | WILLSEMI | ESD56151W05 | 5V | SOD-323 |
| 5* | PRISEMI | PESDHC2FD4V5BH | 4.5V | DFN1006-2L |
| 6* | WAYON | WS4.5DPV | 4.5V | DFN1610-2L |

NOTE

If user chooses TVS, please pay attention to Clamping Voltage in your datasheet . For example when the surge input is 100V,the Clamping Voltage is less than 10V.

*If vbat is higher than 3.8V, do not choose NO. 5 and NO. 6.

3.1.2 Recommended Power Supply Circuit

It is recommended that a switching mode power supply or a linear regulator power supply is used. It is important to make sure that all the components used in the power supply circuit can resist a peak current up to 2A.

The following figure shows the linear regulator reference circuit with 5V input and 3.8V output.

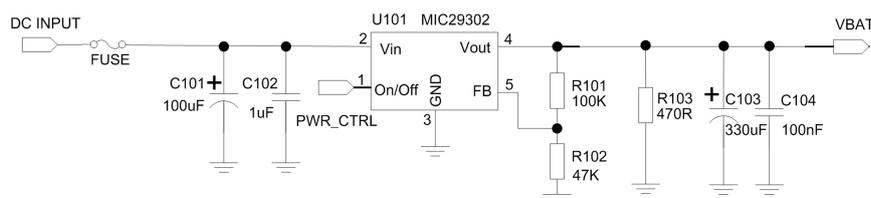


Figure 7: Linear regulator reference circuit

If there is a big voltage difference between input and output for VBAT power supply, or the efficiency is

extremely important, then a switching mode power supply will be preferable. The following figure shows the switching mode power supply reference circuit.

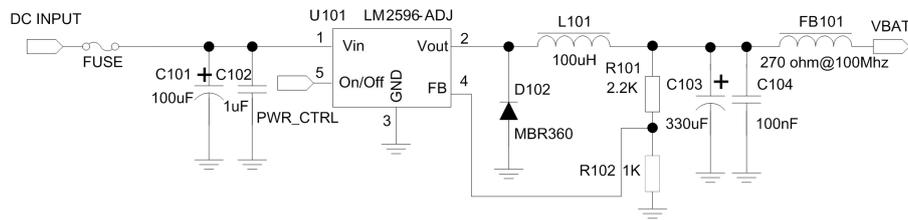


Figure 8: Switching mode power supply reference circuit

NOTE

The Switching Mode power supply solution for VBAT must be chosen carefully against Electro Magnetic Interference and ripple current from depraving RF performance.

3.1.3 Voltage Monitor

To monitor the VBAT voltage, the AT command “AT+CBC” can be used.

For monitoring the VBAT voltage outside or within a special range, the AT command “AT+CVALARM” can be used to enable the under-voltage warning function.

If users need to power off MODULE, when the VBAT voltage is out of a range, the AT command “AT+CPMVT” can be used to enable under-voltage power-off function.

Note: Under-voltage warning function and under-voltage power-off function are disabled by default. For more information about these AT commands, please refer to Document [1].

NOTE

Under-voltage warning function and under-voltage power-off function are disabled by default. For more information about these AT commands, please refer to Document [1].

3.2 Power on/Power off/Reset Function

3.2.1 Power on

MODULE can be powered on by pulling the PWRKEY pin down to ground.

The PWRKEY pin has been pulled up with a diode to 1.8V internally, so it does not need to be pulled up externally. It is strongly recommended to put a 100nF capacitor, an ESD protection diode, close to the PWRKEY pin as it would strongly enhance the ESD performance of PWRKEY pin. Please refer to the following figure for the recommended reference circuit.

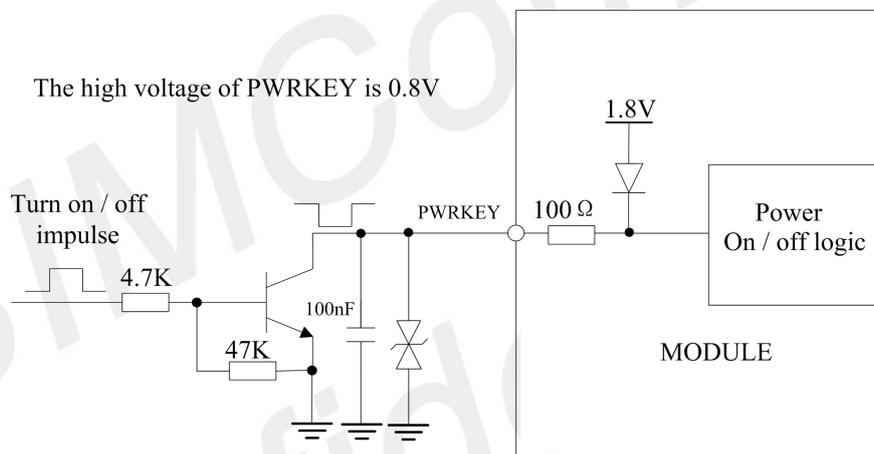


Figure 9: Reference power on/off circuit

NOTE

Module could be automatically power on by connecting PWRKEY pin to ground via 0R resistor directly.

The power-on scenarios are illustrated in the following figure.

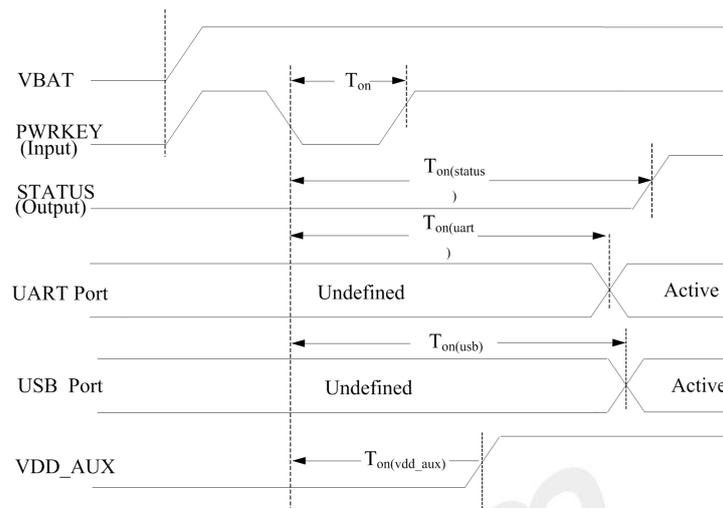


Figure 10: Power on timing sequence

Table 8: Power on timing and electronic characteristic

| Symbol | Parameter | Min. | Typ. | Max. | Unit |
|--------------------|--|------|------|------|------|
| T_{on} | The time of active low level impulse of PWRKEY pin to power on MODULE | 100 | 500 | - | ms |
| $T_{on(status)}$ | The time from power-on issue to STATUS pin output high level(indicating power up ready) | 15 | 16 | - | s |
| $T_{on(uart)}$ | The time from power-on issue to UART port ready | 13 | 14 | - | s |
| $T_{on(vdd_aux)}$ | The time from power-on issue to VDD_AUX ready | | 2.5 | - | s |
| $T_{on(usb)}$ | The time from power-on issue to USB port ready | 11 | 12 | - | s |
| V_{IH} | Input high level voltage on PWRKEY pin | 0.6 | 0.8 | 1.8 | V |
| V_{IL} | Input low level voltage on PWRKEY pin | -0.3 | 0 | 0.5 | V |

3.2.2 Power off

The following methods can be used to power off MODULE.

- Method 1: Power off MODULE by pulling the PWRKEY pin down to ground.
- Method 2: Power off MODULE by AT command “AT+CPOF”.
- Method 3: over-voltage or under-voltage automatic power off. The voltage range can be set by AT command “AT+CPMVT”.
- Method 4: over-temperature or under-temperature automatic power off.

NOTE

If the temperature is outside the range of $-30\sim+80^{\circ}\text{C}$, some warning will be reported via AT port. If the temperature is outside the range of $-40\sim+85^{\circ}\text{C}$, MODULE will be powered off automatically.

For details about “AT+CPOF” and “AT+CPMVT”, please refer to Document [1].

These procedures will make MODULE disconnect from the network and allow the software to enter a safe state, and save data before MODULE be powered off completely.

The power off scenario by pulling down the PWRKEY pin is illustrated in the following figure.

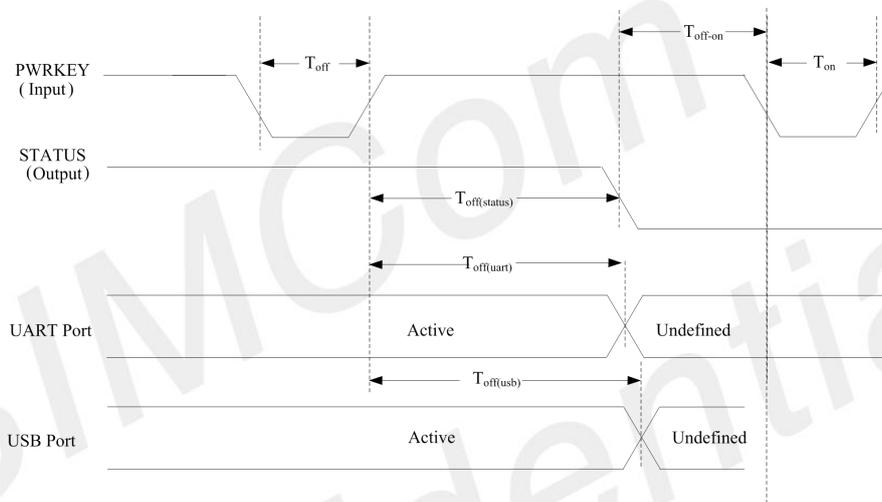


Figure 11: Power off timing sequence

Table 9: Power off timing and electronic characteristic

| Symbol | Parameter | Time value | | | Unit |
|--------------------------|--|------------|------|------|------|
| | | Min. | Typ. | Max. | |
| T_{off} | The active low level time pulse on PWRKEY pin to power off MODULE | -- | 2.5 | -- | s |
| $T_{\text{off(status)}}$ | The time from power-off issue to STATUS pin output low level(indicating power off)* | 25 | 26 | - | s |
| $T_{\text{off(uart)}}$ | The time from power-off issue to UART port off | 14 | 15 | - | s |
| $T_{\text{off(usb)}}$ | The time from power-off issue to USB port off | 27 | 28 | - | s |
| $T_{\text{off-on}}$ | The buffer time from power-off issue to power-on issue | 0 | - | - | s |

NOTE

The STATUS pin can be used to detect whether MODULE is powered on or not. When MODULE has

been powered on and firmware goes ready, STATUS will be high level, or else STATUS will still low level.

3.2.3 Reset Function

MODULE can be reset by pulling the RESET pin down to ground.

NOTE

This function is only used as an emergency reset, when AT command “AT+CPOF” and the PWRKEY pin all have lost efficacy.

The RESET pin has been pulled up with a 40KΩ resistor to 1.8V internally, so it does not need to be pulled up externally. It is strongly recommended to put a 100nF capacitor and an ESD protection diode close to the RESET pin. Please refer to the following figure for the recommended reference circuit.

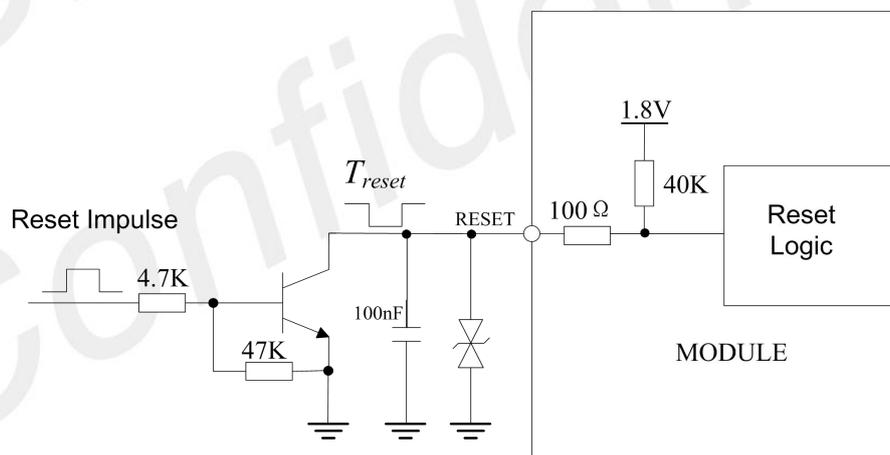


Figure 12: Reference reset circuit

Table 10: RESET pin electronic characteristic

| Symbol | Description | Min. | Typ. | Max. | Unit |
|-------------|--|------|------|------|------|
| T_{reset} | The active low level time impulse on RESET pin to reset MODULE | 100 | 200 | 500 | ms |
| V_{IH} | Input high level voltage | 1.17 | 1.8 | 2.1 | V |

| | | | | | |
|----------|-------------------------|------|---|-----|---|
| V_{IL} | Input low level voltage | -0.3 | 0 | 0.8 | V |
|----------|-------------------------|------|---|-----|---|

3.3 UART Interface

MODULE provides a 7-wire UART (universal asynchronous serial transmission) interface as DCE (Data Communication Equipment). AT commands and data transmission can be performed through UART interface.

3.3.1 UART Design Guide

The following figures show the reference design.

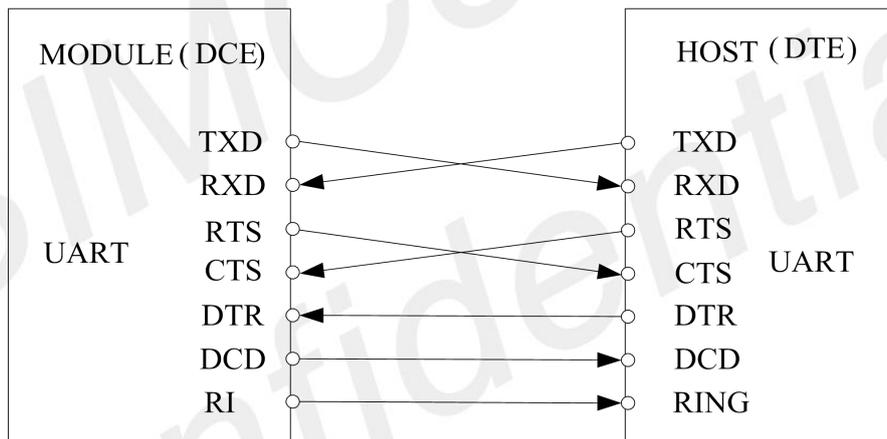


Figure 13: UART full modem

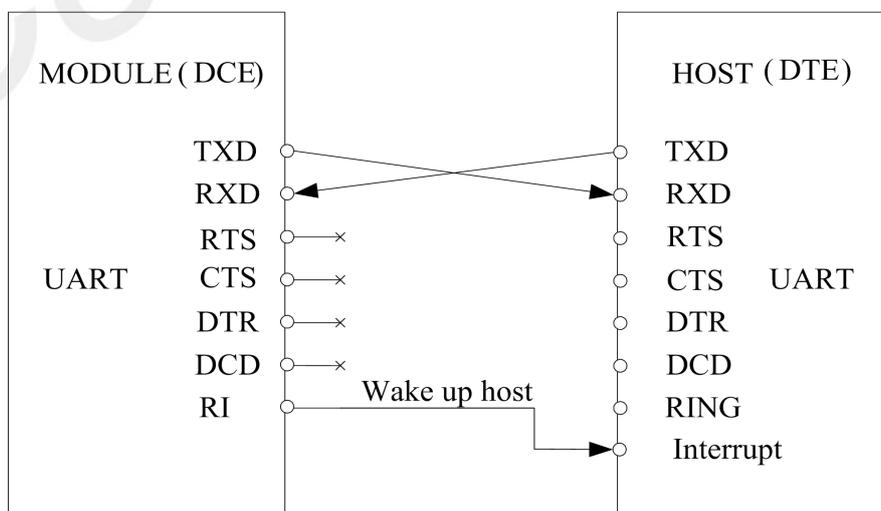


Figure 14: UART null modem

The MODULE UART is 1.8V voltage interface. If user's UART application circuit is 3.3V voltage interface, the level shifter circuits should be used for voltage matching. The TXB0108RGYR provided by Texas Instruments is recommended. The following figure shows the voltage matching reference design.

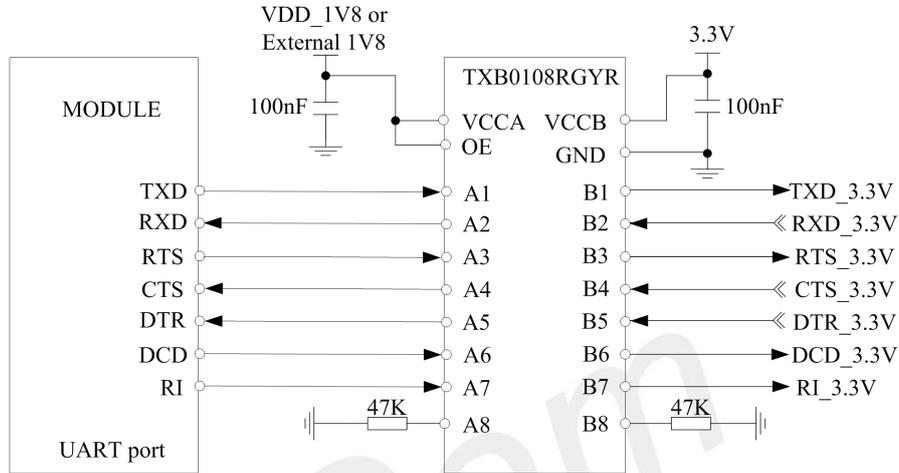


Figure 15: Reference circuit of level shift

User can use another level shifter circuits as follow

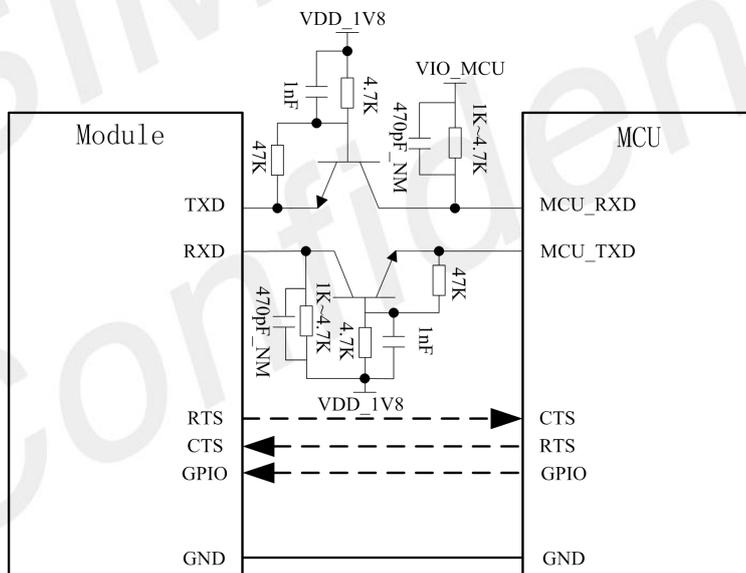


Figure 16: level matching circuit

To comply with RS-232-C protocol, the RS-232-C level shifter chip should be used to connect MODULE to the RS-232-C interface, for example SP3238ECA, etc.

NOTE

User needs to use high speed transistors such as MMBT3904.

NOTE

MODULE supports the following baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600, 3200000, 3686400, 4000000bps. The default band rate is 115200bps.

3.3.2 RI and DTR Behavior

The RI pin can be used to interrupt output signal to inform the host controller such as application CPU. Normally RI will keep high level until certain conditions such as receiving SMS, or a URC report coming, and then it will change to low level.

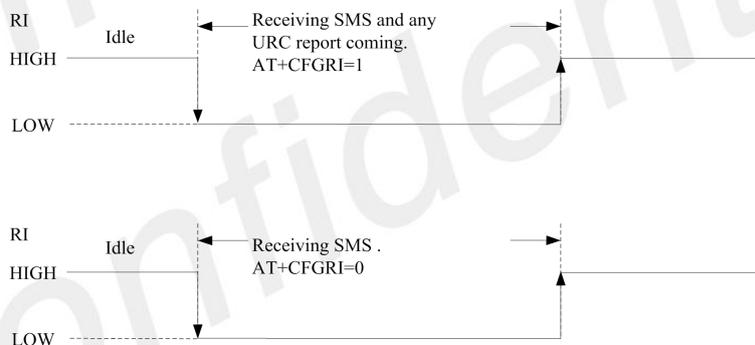


Figure 17: RI behaviour (SMS and URC report)

Normally RI will be kept at a high level until a voice call, then it will output periodic rectangular wave with 5900ms low level and 100ms high level. It will output this kind of periodic rectangular wave until the call is answered or hung up.

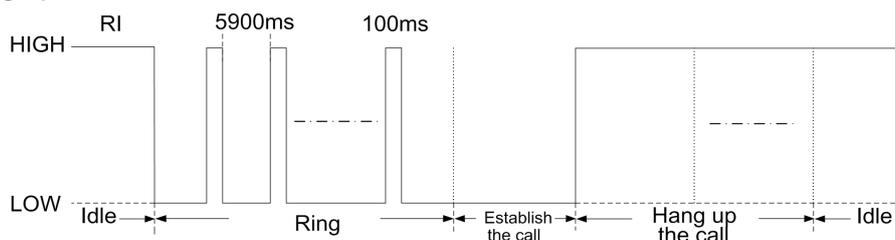


Figure 18 : RI behaviour (voice call)

NOTE

For more details of AT commands about UART, please refer to document [1] and [22].

DTR pin can be used to wake MODULE from sleep. When MODULE enters sleep mode, pulling down DTR can wake MODULE.

3.4 USB Interface

The MODULE contains a USB interface compliant with the USB2.0 specification as a peripheral, but the USB charging function is not supported.

MODULE can be used as a USB device. MODULE supports the USB suspend and resume mechanism which can reduce power consumption. If there is no data transmission on the USB bus, MODULE will enter suspend mode automatically, and will be resumed by some events such as voice call, receiving SMS, etc.

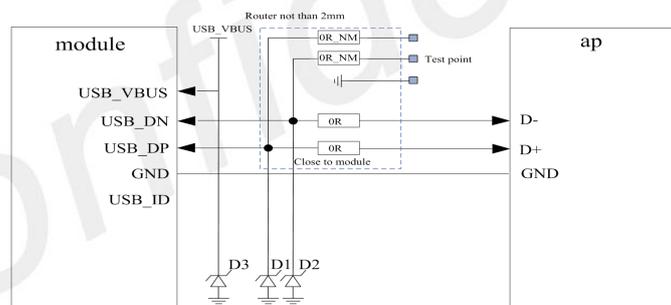


Figure 19: USB reference circuit

Because of the high bit rate on USB bus, more attention should be paid to the influence of the junction capacitance of the ESD component on USB data lines. Typically, the capacitance should be less than 1pF. It is recommended to use an ESD protection component such as ESD9L5.0ST5G provided by On Semiconductor (www.onsemi.com).

D3 is suggested to select the diode with anti-ESD and voltage surge function, or user could add a TVS for surge clamping. The recommend TVS please refer to table 7.

NOTE

The USB_DN and USB_DP nets must be traced by 90Ohm+/-10% differential impedance. SIMcom recommend add USB test pads on customer's EVB board for Product Debug.

3.5 HSIC interface

HSIC is a 2-signal source synchronous serial interface which uses 240MHz DDR signaling to provide High-Speed 480Mbps USB transfers which are 100% host driver compatible with traditional USB cable-connected topologies. Full-Speed (FS) and Low-Speed (LS) USB transfers are not directly supported by the HSIC interface (a HSIC enabled hub can provide FS and LS support, as well as IC_USB support)

The differences between HSIC and USB2.0 are listed below:

Table 11: Key differences between HSIC and HS-USB

| HSIC | USB2.0 |
|-----------------------------------|---|
| Signal-ended signaling at 1.2 V | Differential signaling |
| Two signals – STROBE, DATA | Four wires – Ground, D+, D-, VBUS |
| Double data rate signaling | Data inferred from differential signaling |
| HS-USB 480 Mbps only | HS/FS/LS support |
| Maximum trace length of 10 cm | Maximum cable length of 5 m |
| No HS chirp protocol | HS chirp protocol |
| Lower power consumption (digital) | Higher power consumption (analog) |
| No concept of disconnect | Hot plug/play support |

module implements a HSIC interface compliant with the HSIC1.0 specification which can be used to connect to the external IC.

NOTE

The module HSIC default work as HSIC to LAN function, if user have any other questions ,please contact simcom for more details.

3.6 SGMII Interface

MODULE provides a SGMII interface with an Ethernet MAC embedded, users could add a PHY to connect to the Ethernet, and the PHY device could be controlled by the MDIO interface and other dedicated signals.

Two Ethernet PHY are supported: AR8031/AR8033 (Qualcomm) and BCM89820 (Broadcom). The AR8031/AR8033 is used for the industrial field and the BCM89820 is dedicated for the automotive field.

Main features of SGMII:

- Ethernet Mac integrated in the module
- IEEE 802.3 Ethernet 10/100/1000Mbps, SGMII IF
- Supports IEEE 1588, Precision Time Protocol (PTP)
- Full duplex rated to 1 Gbps
- Half/full duplex for 10/100 Mbps
- Can be connected to external Ethernet PHY like AR8031/AR8033(industrial 10/100/1000Mbps), BCM89820(automotive 10/100Mbps)
- Uses 8B10B encoding of data with effective baud data rate of 1 Gbps, data rate is always 1.25 Gbps (or DDR clock is always at 625 MHz)

Main features of MDIO:

- Host mode only
- Dual voltage: 1.8 V or 2.85 V operation
- Default signal frequency: 6.25MHz
- MDIO_DATA is OD-gate, and requires an external 1.5 kΩ pull-up resistor to VMDIO.

For the AR8031/AR8033, User should provide 3.3V to power the external Ethernet PHY system and the current should be more than 200mA.

3.6.1 Reference schematic with AR8033

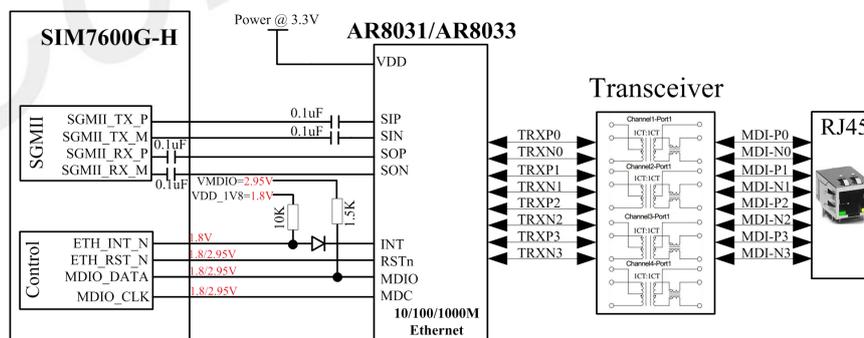


Figure 20: Reference SGMII circuit with AR8033

For the BCM89820, Users should provide 3.3V and 1.2V to power the external Ethernet PHY system and the data interface of PHY. The current of 3.3V and 1.2V should be more than 100mA and 150mA.

3.6.2 Reference schematic with BCM89820

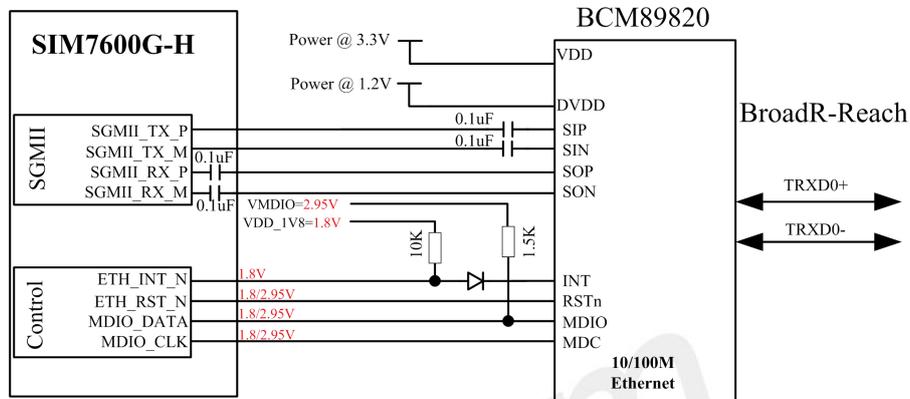


Figure 21: Reference SGMII circuit with BCM89820

NOTE

The module SGMII function default closed. If user need, please contact SIMCom for more details or refer to [document \[28\]](#)

3.7 USIM Interface

MODULE supports both 1.8V and 3.0V USIM Cards.

Table 12: USIM electronic characteristic in 1.8V mode (USIM_VDD=1.8V)

| Symbol | Parameter | Min. | Typ. | Max. | Unit |
|-----------------|---------------------------|----------------|------|---------------|------|
| USIM_VDD | LDO power output voltage | 1.75 | 1.8 | 1.95 | V |
| V _{IH} | High-level input voltage | 0.65*USIM_VDD | - | USIM_VDD +0.3 | V |
| V _{IL} | Low-level input voltage | -0.3 | 0 | 0.35*USIM_VDD | V |
| V _{OH} | High-level output voltage | USIM_VDD -0.45 | - | USIM_VDD | V |
| V _{OL} | Low-level output voltage | 0 | 0 | 0.45 | V |

Table 13: USIM electronic characteristic 3.0V mode (USIM_VDD=2.95V)

| Symbol | Parameter | Min. | Typ. | Max. | Unit |
|-----------------|---------------------------|----------------|------|---------------|------|
| USIM_VDD | LDO power output voltage | 2.75 | 2.95 | 3.05 | V |
| V _{IH} | High-level input voltage | 0.65*USIM_VDD | - | USIM_VDD +0.3 | V |
| V _{IL} | Low-level input voltage | -0.3 | 0 | 0.25*USIM_VDD | V |
| V _{OH} | High-level output voltage | USIM_VDD -0.45 | - | USIM_VDD | V |
| V _{OL} | Low-level output voltage | 0 | 0 | 0.45 | V |

3.7.1 USIM Application Guide

It is recommended to use an ESD protection component such as ESDA6V1W5 produced by ST (www.st.com) or SMF15C produced by ON SEMI (www.onsemi.com). Note that the USIM peripheral circuit should be close to the USIM card socket. The following figure shows the 6-pin SIM card holder reference circuit.

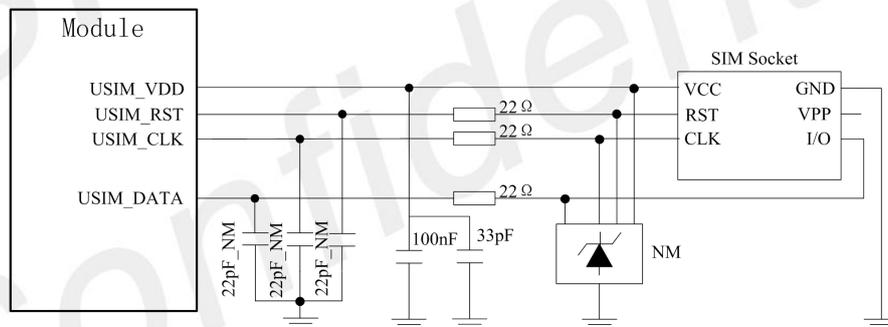


Figure 22: USIM interface reference circuit

NOTE

USIM_DATA has been pulled up with a 10KΩ resistor to USIM_VDD in MODULE. A 100nF capacitor on USIM_VDD is used to reduce interference. For more details of AT commands about USIM, please refer to document [1]. USIM_CLK is very important signal, the rise time and fall time of USIM_CLK should be less than 40ns, otherwise the USIM card might not be initialized correctly.

The USIM_DET pin is used for detection of the USIM card hot plug in. User can select the 8-pin USIM card holder to implement USIM card detection function.

The following figure shows the 8-pin SIM card holder reference circuit.

Figure 24: Amphenol SIM card socket

Table 14: Amphenol USIM socket pin description

| Pin | Signal | Description |
|-----|-----------|-------------------------|
| C1 | USIM_VDD | USIM Card Power supply. |
| C2 | USIM_RST | USIM Card Reset. |
| C3 | USIM_CLK | USIM Card Clock. |
| C5 | GND | Connect to GND. |
| C6 | VPP | NC |
| C7 | USIM_DATA | USIM Card data I/O. |

3.8 PCM Interface

MODULE provides a PCM interface for external codec, which can be used in master mode with short sync and 16 bits linear format.

Table 15: PCM format

| Characteristics | Specification |
|-----------------------|--------------------|
| Line Interface Format | Linear(Fixed) |
| Data length | 16bits(Fixed) |
| PCM Clock/Sync Source | Master Mode(Fixed) |
| PCM Clock Rate | 2048 KHz (Fixed) |
| PCM Sync Format | Short sync(Fixed) |
| Data Ordering | MSB |

NOTE

For more details about PCM AT commands, please refer to document [1].

3.8.1 PCM timing

MODULE supports 2.048 MHz PCM data and sync timing for 16 bits linear format codec.

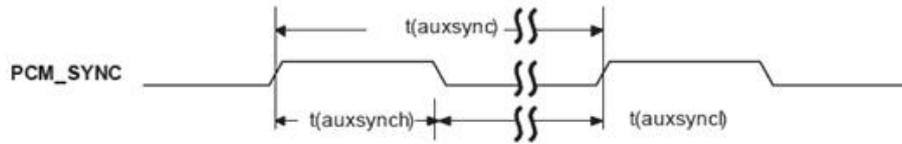


Figure 25: PCM_SYNC timing

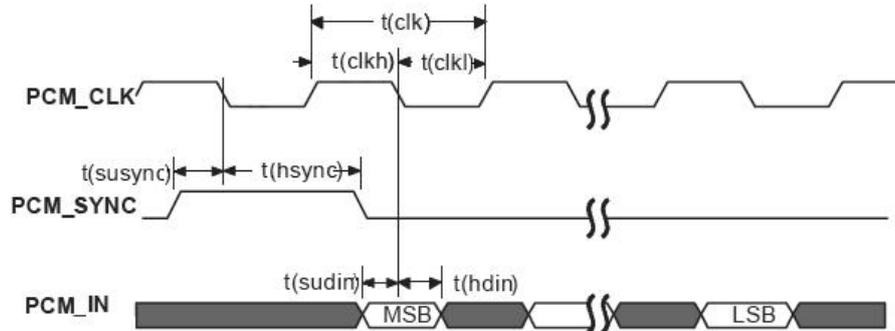


Figure 26: EXT codec to MODULE timing

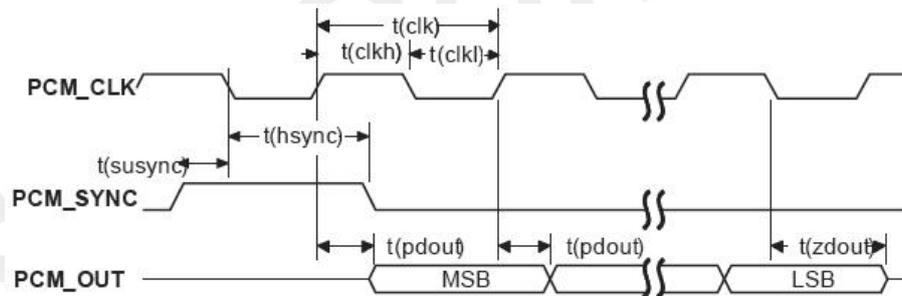


Figure 27: Module to EXT codec timing

Table 16: PCM timing parameters

| Parameter | Description | Min. | Typ. | Max. | Unit |
|-----------------------|---|------|-------|------|------|
| T(sync) | PCM_SYNC cycle time | – | 125 | – | μs |
| T(synch) | PCM_SYNC high level time | – | 488 | – | ns |
| T(sync _l) | PCM_SYNC low level time | – | 124.5 | – | μs |
| T(clk) | PCM_CLK cycle time | – | 488 | – | ns |
| T(clkh) | PCM_CLK high level time | – | 244 | – | ns |
| T(clkl) | PCM_CLK low level time | – | 244 | – | ns |
| T(susync) | PCM_SYNC setup time high before falling edge of PCM_CLK | – | 244 | – | ns |
| T(hsync) | PCM_SYNC hold time after falling edge of PCM_CLK | – | 244 | – | ns |
| T(sudin) | PCM_IN setup time before falling edge of PCM_CLK | 60 | – | – | ns |
| T(hdin) | PCM_IN hold time after falling edge of PCM_CLK | 10 | – | – | ns |
| T(pdout) | Delay from PCM_CLK rising to PCM_OUT valid | – | – | 60 | ns |

| | | | | | |
|----------|--|---|-----|---|----|
| T(zdout) | Delay from PCM_CLK falling to PCM_OUT HIGH-Z | - | 160 | - | ns |
|----------|--|---|-----|---|----|

3.8.2 PCM Application Guide

The following figure shows the external codec reference design.

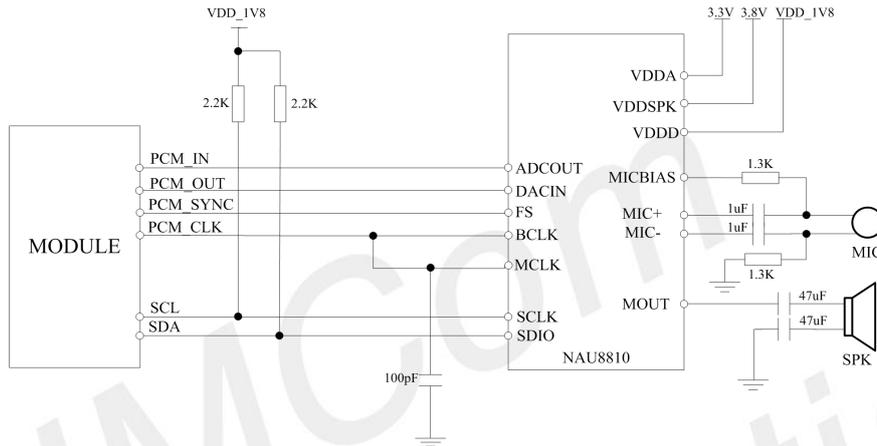


Figure 28: Audio codec reference circuit

3.9 SD Interface

MODULE provides a 4-bit SD/MMC/eMMC interface with clock rate up to 200 MHz.

When connected to a SD or MMC card, the voltage of SD interface is 1.8/2.85V, which is compatible with Secure Digital Physical Layer Specification version 3.0 and SDIO Card Specification version 3.0. It supports up to 128GB SD cards.

When connected to a eMMC card, the interface voltage will be a single 1.8V, which is compatible with eMMC Specification, version 4.5. It supports up to 128GB eMMC cards.

Table 17: SD/MMC electronic characteristic as 2.85V (SD_DATA0-3, SD_CLK and SD_CMD)

| Symbol | Parameter | Min. | Typ. | Max. | Unit |
|-----------------|---------------------------|-----------|------|-----------|------|
| V _{IH} | High-level input voltage | 0.65*2.85 | - | 2.85+0.3 | V |
| V _{IL} | Low-level input voltage | -0.3 | 0 | 0.25*2.85 | V |
| V _{OH} | High-level output voltage | 0.75*2.85 | 2.85 | 2.85 | V |
| V _{OL} | Low-level output voltage | 0 | 0 | 0.15*2.85 | V |

Table 18: SD/MMC/eMMC electronic characteristic as 1.8V (SD_DATA0-3, SD_CLK and SD_CMD)

| Symbol | Parameter | Min. | Typ. | Max. | Unit |
|-----------------|---------------------------|---------|------|---------|------|
| V _{IH} | High-level input voltage | 0.7*1.8 | - | 1.8+0.2 | V |
| V _{IL} | Low-level input voltage | -0.3 | 0 | 0.3*1.8 | V |
| V _{OH} | High-level output voltage | 1.8-0.4 | 1.8 | 1.8 | V |
| V _{OL} | Low-level output voltage | 0 | 0 | 0.45 | V |

Users should provide 2.85V to power SD card system and the current should more than 350mA, which is showed below as VCC_SD. ESD/EMI components should be arranged beside SD card socket. Refer to the following application circuit.

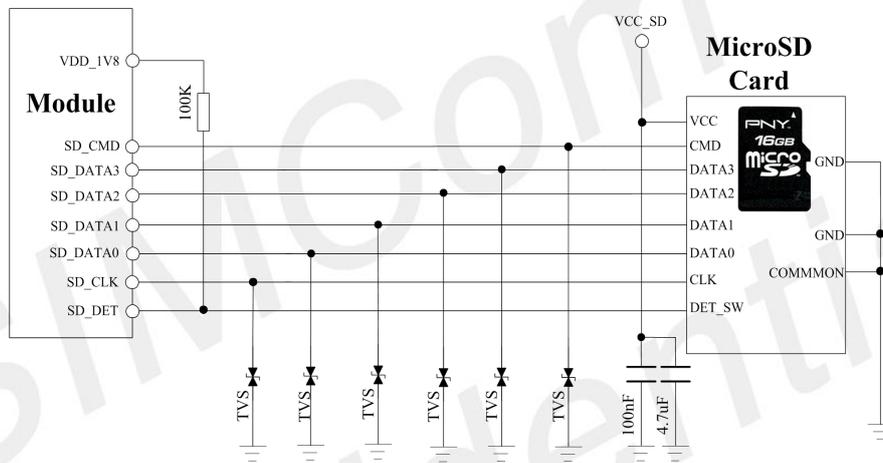


Figure 29: SD reference circuit

Users should provide 2.85V to power eMMC card system and 1.8V to power the SDIO_DATA/CMD/CLK signals. The source of 2.85V should be able to provide more than 500mA* which showed below as VCC_eMMC, as the source of 1.8V should be able to provide more than 300mA* which showed below as VCCQ_1V8. ESD/EMI components should be arranged close to the eMMC card. Refer to the following application circuit.

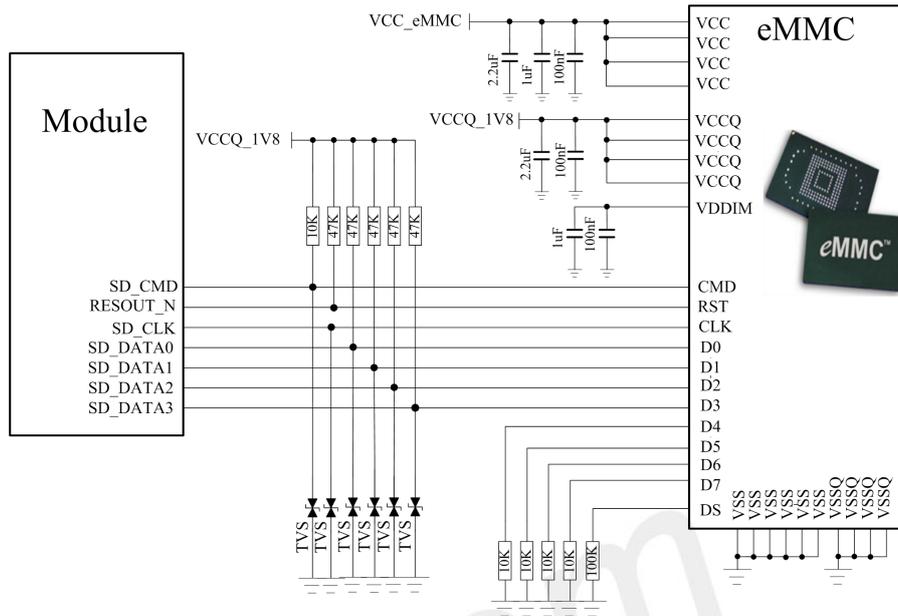


Figure 30: eMMC reference circuit

NOTE

For the current of VCC_eMMC and VCCQ_1V8, users should better refer to the related datasheet of eMMC which is used. The listed current of 500mA and 300mA are just for your reference.

SD/MMC/eMMC card layout guide lines:

- Protect SD card signals from noisy signals (clocks, SMPS, etc.).
- Up to 200 MHz clock rate, 50 Ω nominal, ±10% trace impedance
- CLK to DATA/CMD length matching < 1 mm
- Total routing length < 50 mm
- Spacing to all other signals = 2x line width
- Bus capacitance < 10 pF

3.10 I2C Interface

MODULE provides a I2C interface compatible with I2C specification, version 5.0, with clock rate up to 400 kbps. Its operation voltage is 1.8V.

The following figure shows the I2C bus reference design.

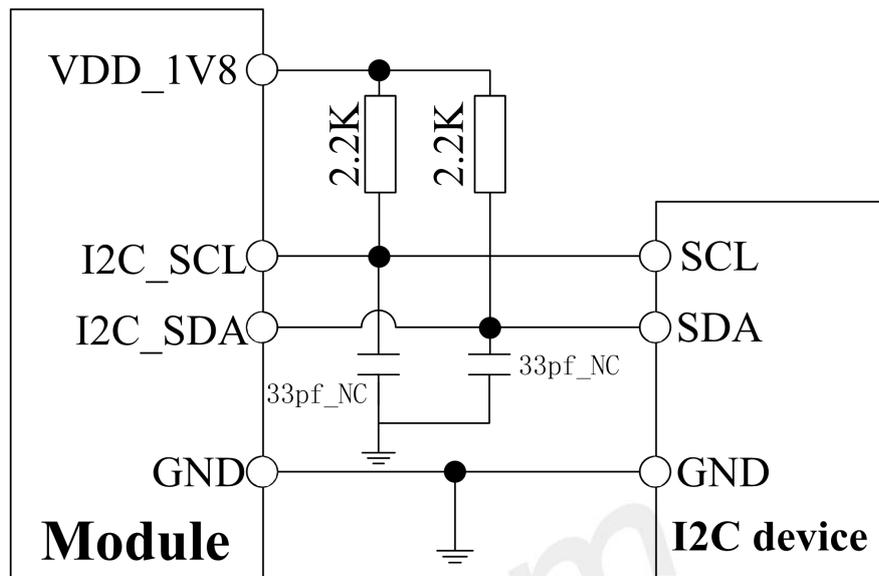


Figure 31: I2C reference circuit

NOTE

SDA and SCL do not have pull-up resistors in MODULE. So, 2 external pull up resistors are needed in application circuit.

“AT+CR1IC and AT+CW1IC” AT commands could be used to read/write register values of the I2C peripheral devices. For more details about AT commands please refer to document [1].

3.11 SDIO Interface

MODULE provides a 4 bit 1.8V SDIO interface for WLAN solution with W58 module.

The SDIO interface can be used for WLAN solution.

NOTE

Special software version for CAT4 MODULEs supports this function.

3.12 SPI Interface

Module provides a SPI interface as a master only. It provides a duplex, synchronous, serial communication

link with peripheral devices. Its operation voltage is 1.8V, with clock rates up to 50 MHz

NOTE

For more details of the AT commands about the SPI, please refer to document [1].

3.13 Network status

The NETLIGHT pin is used to control Network Status LED, its reference circuit is shown in the following figure.

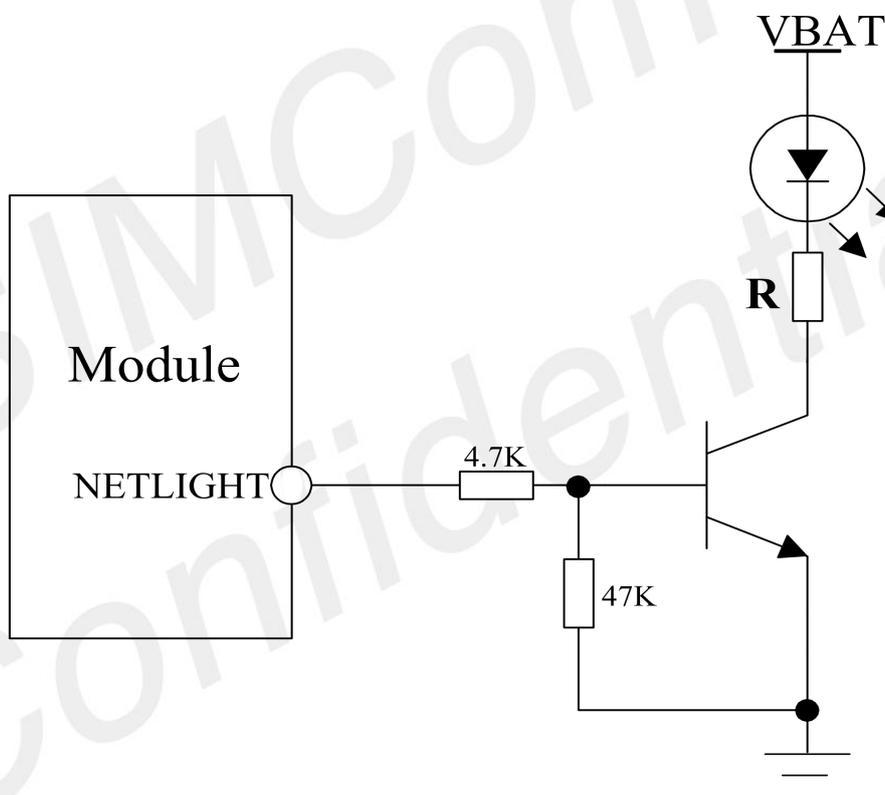


Figure 32: NETLIGHT reference circuit

NOTE

The value of the resistor named “R” depends on the LED characteristic.

Table 19: NETLIGHT pin status

| NETLIGHT pin status | Module status |
|---------------------|--|
| Always On | Searching Network; Call Connect(include VOLTE,SRLTE) |

| | |
|---------------------|-------------------------------|
| 200ms ON, 200ms OFF | Data Transmit; 4G registered; |
| 800ms ON, 800ms OFF | 2G/3G registered network |
| OFF | Power off ;Sleep |

NOTE

NETLIGHT output low level as “OFF”, and high level as “ON”.

3.14 Flight Mode Control

The FLIGHTMODE pin can be used to control MODULE to enter or exit the Flight mode. In Flight mode, the RF circuit is closed to prevent interference with other equipments and minimize current consumption. Bidirectional ESD protection component is suggested to add on FLIGHTMODE pin, its reference circuit is shown in the following figure.

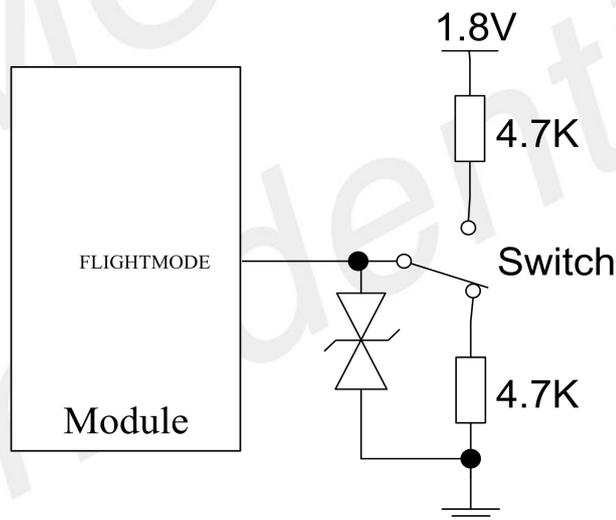


Figure 33: Flight mode switch reference circuit

Table 20: FLIGHTMODE pin status

| FLIGHTMODE pin status | Module operation |
|-----------------------|--|
| Input Low Level | Flight Mode: RF is closed |
| Input High Level | AT+CFUN=0: RF is closed AT+CFUN=1:RF is working |

3.15 Other interface

3.15.1 Sink Current Source

The ISINK pin is VBAT tolerant and intended to drive some passive devices, such as LCD backlight and white LED, etc. Its output current can be up to 40mA and be set by the AT command “AT+ CLEDITST”.

Table 21: Sink current electronic characteristic

| Symbol | Description | Min. | Typ. | Max. | Unit |
|-------------|------------------|------|------|------|------|
| V_{ISINK} | Voltage tolerant | 0.5 | - | VBAT | V |
| I_{ISINK} | Current tolerant | 0 | - | 40 | mA |

ISINK is a ground-referenced current sink. The following figure shows its reference circuit.

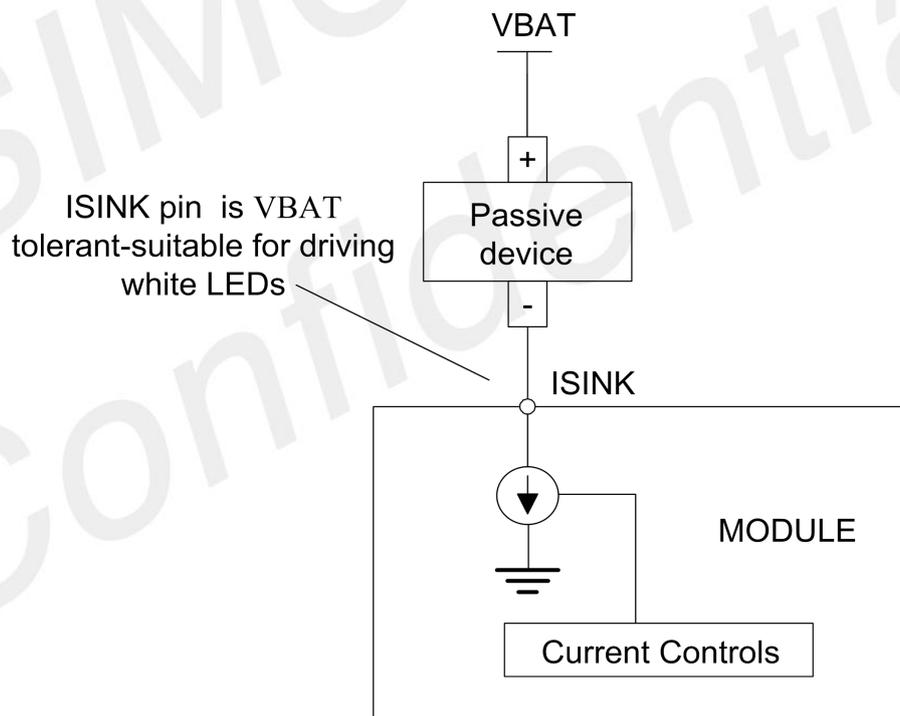


Figure 34: ISINK reference circuit

NOTE

The sinking current can be adjusted to meet the design requirement through the AT command “AT+ CLEDITST =<0>, <value>”. The “value” ranges from 0 to 8, on behalf of the current from 0mA to 40mA by 5mA step.

3.15.2 ADC

MODULE has 2 dedicated ADC pins named ADC1 and ADC2. They are available for digitizing analog signals such as battery voltage and so on. These electronic specifications are shown in the following table.

Table 22: ADC1 and ADC2 electronic characteristics

| Characteristics | Min. | Typ. | Max. | Unit |
|-------------------------|------|------|------|------|
| Resolution | – | 15 | – | Bits |
| Conversion time | – | 442 | – | ms |
| Input Range | 0.1 | | 1.7 | V |
| Input serial resistance | 1 | – | – | MΩ |

NOTE

“AT+CADC” and “AT+CADC2” can be used to read the voltage of the ADC1 and ADC2 pins, for more details, please refer to document [1].

3.15.3 LDO

MODULE has a LDO power output, named VDD_AUX. its output voltage is 2.85V by default, Users can switch the LDO on or off by the AT command “AT+CVAUXS” and configure its output voltage by the AT command “AT+CVAUXV”.

Table 23: Electronic characteristic

| Symbol | Description | Min. | Typ. | Max. | Unit |
|----------------------|----------------|------|------|------|------|
| V _{VDD_AUX} | Output voltage | 1.7 | 2.85 | 3.05 | V |
| I _o | Output current | - | - | 150 | mA |

NOTE

For more details of AT commands about VDD_AUX, please refer to document [1].

4 RF Specifications

4.1. GSM/UMTS/LTE RF Specifications

Table 24: Conducted transmission power

| Frequency | Power | Min. |
|-------------|----------------|---------|
| LTE-FDD B2 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B4 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B5 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B12 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B13 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B25 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B26 | 23dBm +/-2.7dB | <-40dBm |
| LTE-FDD B66 | 23dBm +/-2.7dB | <-40dBm |
| LTE-TDD B41 | 23dBm +/-2.7dB | <-40dBm |

Table 25: Operating frequencies

| Frequency | Receiving | Transmission |
|---|----------------------|--------------|
| <p>The LTE Operating frequencies are shown in the following table 24. Note: Operating frequencies of LTE TDD B41 for the MODULE is 200MHz BW, 2496~2690 MHz</p> | | |
| GPS | 1574.4 ~ 1576.44 MHz | - |
| GLONASS | 1598 ~ 1606 MHz | - |
| BD | 1559 ~ 1563 MHz | |

Table 26: E-UTRA operating bands

| E-UTRA Operating Band | Uplink (UL) operating band | Downlink (DL) operating band | Duplex Mode |
|-----------------------|----------------------------|------------------------------|-------------|
|-----------------------|----------------------------|------------------------------|-------------|

| | | | |
|----|---------------|---------------|-----|
| 2 | 1850~1910 MHz | 1930~1990 MHz | FDD |
| 4 | 1710~1755MHz | 2110~2155MHz | FDD |
| 5 | 824~849 MHz | 869~894MHz | FDD |
| 12 | 699~716MHz | 728~746MHz | FDD |
| 13 | 777~787MHz | 746~757MHz | FDD |
| 25 | 1850~1915MHz | 1930~1995MHz | FDD |
| 26 | 814~849MHz | 859~894MHz | FDD |
| 66 | 1710~1780MHz | 2110~2200MHz | FDD |
| 41 | 2496~2696 MHz | 2496~2696 MHz | TDD |

Table 27: Conducted receive sensitivity

| Frequency | Receive sensitivity(Typical) | Receive sensitivity(MAX) |
|-------------|------------------------------|--------------------------|
| LTE FDD/TDD | See table 26. | 3GPP |

Table 28: Reference sensitivity (QPSK)

| E-UTR A band | 1.4 MHz Standard | 3 MHz Standard | 5 MHz Standard | 10 MHz Standard | 15 MHz Standard | 20 MHz Standard | Duplex Mode |
|--------------|------------------|----------------|----------------|-----------------|-----------------|-----------------|-------------|
| 2 | -102.7 | -99.7 | -98 | -95 | -93.2 | -92 | FDD |
| 4 | -104.7 | -101.7 | -100 | -97 | -95.2 | -94 | FDD |
| 5 | -103.2 | -100.2 | -98 | -95 | | | FDD |
| 12 | -101.7 | -98.7 | -97 | -94 | | | FDD |
| 13 | | | -97 | -94 | | | FDD |
| 25 | -101.2 | -98.2 | -96.5 | -93.5 | -91.7 | -90.5 | FDD |
| 26 | -102.7 | -99.7 | -97.5 | -94.5 | -92.7 | | FDD |
| 66 | -104.7 | -101.7 | -100 | -97 | -95.2 | -94 | FDD |
| 41 | - | - | -99 | -96 | -94.2 | -93 | TDD |

4.2. LTE Antenna Design Guide

Users should connect antennas to MODULE's antenna pads through micro-strip line or other types of RF trace and the trace impedance must be controlled in 50Ω. SIMCom recommends that the total insertion loss between the antenna pads and antennas should meet the following requirements:

Table 29: Trace loss

| Frequency | Loss |
|-----------|------|
|-----------|------|

| | |
|-----------------|--------|
| 700MHz-960MHz | <0.5dB |
| 1710MHz-2170MHz | <0.9dB |
| 2300MHz-2650MHz | <1.2dB |

To facilitate the antenna tuning and certification test, a RF connector and an antenna matching circuit should be added. The following figure is the recommended circuit.

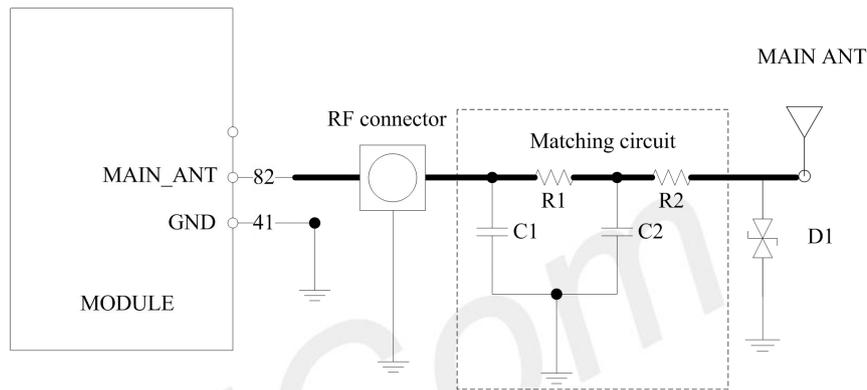


Figure 35: Antenna matching circuit (MAIN_ANT)

In above figure, the components R1, C1, C2 and R2 are used for antenna matching, the values of components can only be achieved after the antenna tuning and usually provided by antenna vendor. By default, the R1, R2 are 0Ω resistors, and the C1, C2 are reserved for tuning. The component D1 is a TVS for ESD protection, and it is optional for users according to application environment.

The RF test connector is used for the conducted RF performance test, and should be placed as close as to the MODULE's MAIN_ANT pin. The traces impedance between MODULE and antenna must be controlled in 50Ω.

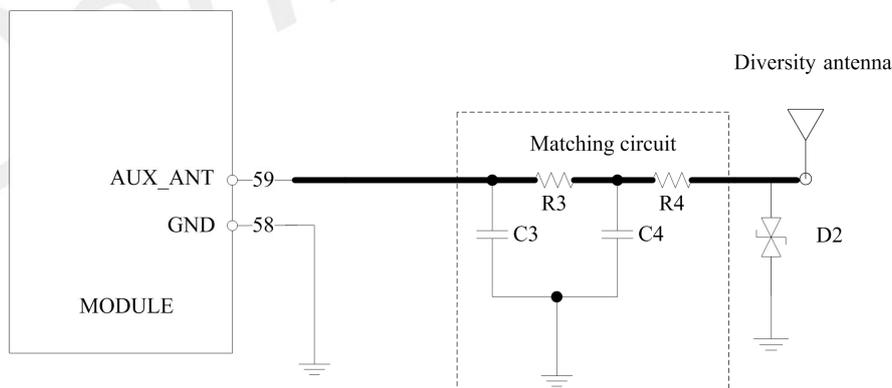


Figure 36: Antenna matching circuit (AUX_ANT)

In above figure, R3, C3, C4 and R4 are used for auxiliary antenna matching. By default, the R3, R4 are 0Ω resistors, and the C3, C4 are reserved for tuning. D2 is a TVS for ESD protection, and it is optional for users according to application environment.

Two TVS are recommended in the table below.

Table 30: Recommended TVS

| Package | Part Number | Vender |
|---------|----------------|--------|
| 0201 | LXES03AAA1-154 | Murata |
| 0402 | LXES15AAA1-153 | Murata |

NOTE

SIMCom suggests the LTE auxiliary antenna to be kept on, since there are many high bands in the designing of LTE-TDD, such as band41. Because of the high insert loss of the RF cable and layout lines, the receiver sensitivity of these bands above will have risk to meet the authentication without the diversity antenna. For more details about auxiliary antenna design notice, please refer to document [25].

4.3. GNSS

MODULE merges GNSS (GPS/GLONASS/BD) satellite and network information to provide a high-availability solution that offers industry-leading accuracy and performance. This solution performs well, even in very challenging environmental conditions where conventional GNSS receivers fail, and provides a platform to enable wireless operators to address both location-based services and emergency mandates.

4.3.1 GNSS Technical specification

- Tracking sensitivity: -159 dBm (GPS) /-158 dBm (GLONASS) /-159 dBm (BD)
- Cold-start sensitivity: -148 dBm
- Accuracy (Open Sky): 2.5m (CEP50)
- TTFF (Open Sky) : Hot start <1s, Cold start<35s
- Receiver Type: 16-channel, C/A Code
- GPS L1 Frequency: 1575.42±1.023MHz
- GLONASS: 1597.5~1605.8 MHz
- BD: 1559.05~1563.14 MHz
- Update rate: Default 1 Hz
- GNSS data format: NMEA-0183
- GNSS Current consumption : 100mA (GSM/UMTS/LTE Sleep ,in total on VBAT pins)
- GNSS antenna: Passive/Active antenna

NOTE

If the antenna is active type, the power should be given by main board because there is no power supply on the GPS antenna pad. If the antenna is passive, it is suggested that the external LNA should be used.

4.3.2 GNSS Application Guide

Users can adopt an active antenna or a passive antenna to MODULE. If using a passive antenna, an external LNA is a must to get better performance.

The following figures are the reference circuits.

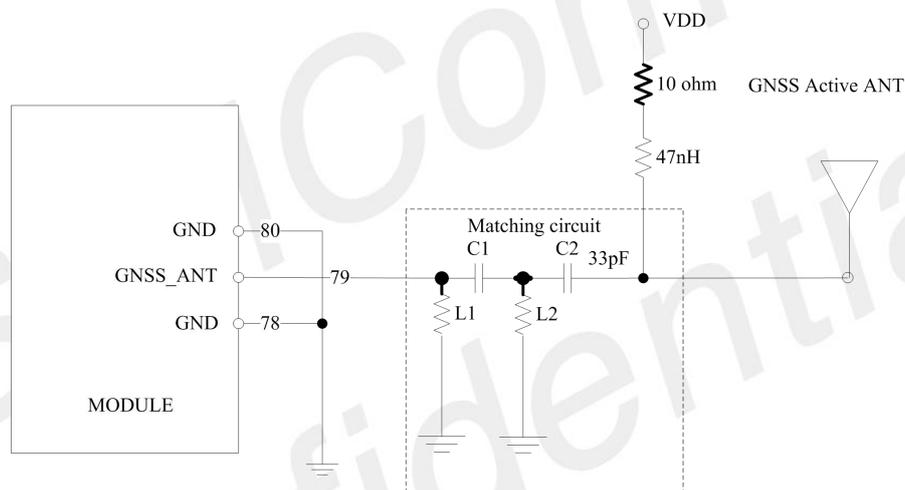


Figure 37: Active antenna circuit

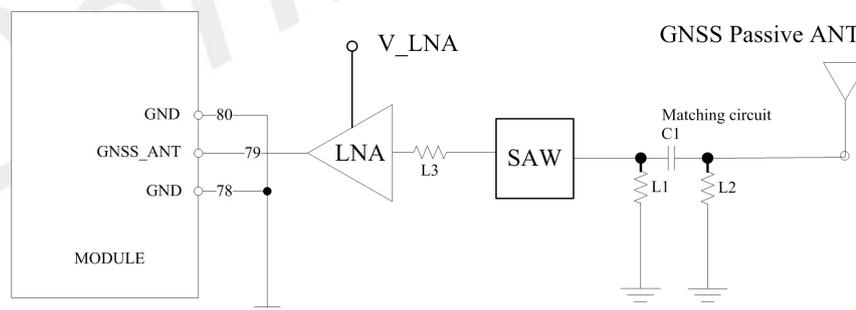


Figure 38: Passive antenna circuit (Default)

In above figures, the components C1, L1 and L2 are used for antenna matching. Usually, the values of the components can only be achieved after antenna tuning and usually provided by antenna vendor. C2 is used for DC blocking. L3 is the matching component of the external LNA, and the value of L3 is determined by the LNA characteristic and PCB layout. Both VDD of active antenna and V_LNA need external power supplies which should be considered according to active antenna and LNA characteristic. LDO/DCDC is recommended to get lower current consuming by shutting down active antennas and LNA when GNSS is

not working.

GNSS can be tested by NMEA port. NMEA sentences can be obtained through UART or USB automatically. NMEA sentences include GSV, GGA, RMC, GSA, and VTG. Before using GNSS, user should configure MODULE in proper operating mode by AT command. Please refer to related documents for details. MODULE can also get position location information through AT directly.

Note: GNSS is closed by default and can be started by AT+CGPS. The AT command has two parameters, the first is on/off, and the second is GNSS mode. Default mode is standalone mode.

AGPS mode needs more support from the mobile telecommunication network. Please refer to document [24] for more details.

NOTE

GNSS is closed by default and can be started by AT+CGPS. The AT command has two parameters, the first is on/off, and the second is GNSS mode. Default mode is standalone mode.

AGPS mode needs more support from the mobile telecommunication network. Please refer to document [24] for more details.

5 Electrical Specification

5.1 Absolute maximum ratings

Absolute maximum rating for digital and analog pins of MODULE are listed in the following table:

Table 31: Absolute maximum ratings

| Parameter | Min. | Typ. | Max. | Unit |
|---|------|------|------|------|
| Voltage at VBAT | -0.5 | - | 6.0 | V |
| Voltage at USB_VBUS | -0.5 | - | 5.85 | V |
| Voltage at digital pins (RESET,SPI,Keypad,GPIO,I2C,UART,PCM) | -0.3 | - | 2.1 | V |
| Voltage at digital pins (SD,USIM) | -0.3 | - | 3.05 | V |
| Voltage at PWRKEY | -0.3 | - | 1.8 | |

5.2 Operating conditions

Table 32: Recommended operating ratings

| Parameter | Min. | Typ. | Max. | Unit |
|---------------------|------|------|------|------|
| Voltage at VBAT | 3.4 | 3.8 | 4.2 | V |
| Voltage at USB_VBUS | 3.0 | 5.0 | 5.25 | V |

Table 33: 1.8V Digital I/O characteristics*

| Parameter | Description | Min. | Typ. | Max. | Unit |
|-----------------|---------------------------|------|------|------|------|
| V _{IH} | High-level input voltage | 1.17 | 1.8 | 2.1 | V |
| V _{IL} | Low-level input voltage | -0.3 | 0 | 0.63 | V |
| V _{OH} | High-level output voltage | 1.35 | - | 1.8 | V |
| V _{OL} | Low-level output voltage | 0 | - | 0.45 | V |

| | | | | | |
|-----------------|--|----|----|---|----|
| I _{OH} | High-level output current(no pull down resistor) | - | 2 | - | mA |
| I _{OL} | Low-level output current(no pull up resistor) | - | -2 | - | mA |
| I _{IH} | Input high leakage current (no pull down resistor) | - | - | 1 | uA |
| I _{IL} | Input low leakage current(no pull up resistor) | -1 | - | - | uA |

NOTE

These parameters are for digital interface pins, such as SPI, GPIOs (NETLIGHT, FLIGHTMODE, STATUS, USIM_DET, SD_DET), SDIO, I2C, UART, PCM, COEXn, and BOOT_CFG0.

The operating temperature of MODULE is listed in the following table.

Table 34: Operating temperature

| Parameter | Min. | Typ. | Max. | Unit |
|---------------------------------|------|------|------|------|
| Normal operation temperature | -30 | 25 | 80 | °C |
| Extended operation temperature* | -40 | 25 | 85 | °C |
| Storage temperature | -45 | 25 | +90 | °C |

NOTE

Module is able to make and receive voice calls, data calls, SMS and make GSM/ UMTX/LTE traffic in -40 °C ~ +85 °C . The performance will be reduced slightly from the 3GPP specifications if the temperature is outside the normal operating temperature range and still within the extreme operating temperature range.

5.3 Operating Mode

5.3.1. Operating Mode Definition

The table below summarizes the various operating modes of MODULE product.

Table 35: Operating mode Definition

| Mode | | Function |
|----------------------------|------------------|---|
| Normal operation | LTE Sleep | In this case, the current consumption of MODULE will be reduced to the minimal level and the MODULE can still receive paging message and SMS. |
| | LTE Idle | Software is active. Module is registered to the network, and the MODULE is ready to communicate. |
| | LTE Talk | Connection between two subscribers is in progress. In this case, the power consumption depends on network settings such as DTX off/on, FR/EFR/HR, hopping sequences, and antenna. |
| | LTE Standby | Module is ready for data transmission, but no data is currently sent or received. In this case, power consumption depends on network settings. |
| | LTE transmission | Data There is data transmission in progress. In this case, power consumption is related to network settings (e.g. power control level); uplink/downlink data rates, etc. |
| Minimum functionality mode | | AT command “AT+CFUN=0” AT+CSCLK=1 can be used to set the MODULE to a minimum functionality mode without removing the power supply. In this mode, the RF part of the MODULE will not work and the USIM card will not be accessible, but the serial port and USB port are still accessible. The power consumption in this mode is lower than normal mode. |
| Flight mode | | AT command “AT+CFUN=4” or pulling down the FLIGHTMODE pin can be used to set the MODULE to flight mode without removing the power supply. In this mode, the RF part of the MODULE will not work, but the serial port and USB port are still accessible. The power consumption in this mode is lower than normal mode. |
| Power off | | Module will go into power off mode by sending the AT command “AT+CPOF” or pull down the PWRKEY pin, normally. In this mode the power management unit shuts down the power supply, and software is not active. The serial port and USB are is not accessible. |

5.3.2. Sleep mode

In sleep mode, the current consumption of MODULE will be reduced to the minimal level, and MODULE can still receive paging message and SMS.

Several hardware and software conditions must be satisfied together in order to let MODULE enter into sleep mode:

1. UART condition
2. USB condition

3. Software condition

NOTE

Before designing, pay attention to how to realize sleeping/waking function and refer to Document [26] for more details.

5.3.3. Minimum functionality mode and Flight mode

Minimum functionality mode ceases a majority function of MODULE, thus minimizing the power consumption. This mode is set by the AT command which provides a choice of the functionality levels.

- AT+CFUN=0: Minimum functionality
- AT+CFUN=1: Full functionality (Default)
- AT+CFUN=4: Flight mode

If MODULE has been set to minimum functionality mode, the RF function and USIM card function will be closed. In this case, the serial port and USB are still accessible, but RF function and USIM card will be unavailable.

If MODULE has been set to flight mode, the RF function will be closed. In this case, the serial port and USB are still accessible, but RF function will be unavailable.

When MODULE is in minimum functionality or flight mode, it can return to full functionality by the AT command "AT+CFUN=1".

5.4 Current Consumption

The current consumption is listed in the table below.

Table 36: Current consumption on VBAT Pins (VBAT=3.8V)

GNSS

| | |
|--|----------------------------------|
| GNSS supply current (AT+CFUN=0,with USB connection) | @ -140dBm, Tracking Typical:38ma |
|--|----------------------------------|

LTE sleep/idle mode

| | |
|--|---|
| LTE supply current (GNSS off, without USB connection) | Sleep mode Typical: 2.04ma Idle mode Typical: 17.3ma |
|--|---|

| LTE data | | | |
|-------------|--------|---------|-----------------|
| LTE-FDD B2 | @5MHz | 22.1dBm | Typical: 676 ma |
| | @10MHz | 22.4dBm | Typical: 723 ma |
| | @20MHz | 22.3dBm | Typical: 759 ma |
| LTE-FDD B4 | @5MHz | 22.0dBm | Typical: 709 ma |
| | @10MHz | 22.1dBm | Typical: 769 ma |
| | @20MHz | 22.6dBm | Typical: 896 ma |
| LTE-FDD B5 | @5MHz | 22.2dBm | Typical: 619 ma |
| | @10MHz | 22.1dBm | Typical: 628 ma |
| LTE-FDD B12 | @5MHz | 22.7dBm | Typical: 600 ma |
| | @10MHz | 22.7dBm | Typical: 607 ma |
| LTE-FDD B13 | @5MHz | 21.9dBm | Typical: 685 ma |
| | @10MHz | 22.0dBm | Typical: 653 ma |
| LTE-FDD B25 | @5MHz | 22dBm | Typical: 634 ma |
| | @10MHz | 22dBm | Typical: 702 ma |
| | @20MHz | 22dBm | Typical: 781 ma |
| LTE-FDD B26 | @5MHz | 22.4dBm | Typical: 615 ma |
| | @10MHz | 22.7dBm | Typical: 664 ma |
| | @15MHz | 22.3dBm | Typical: 713 ma |
| LTE-FDD B66 | @5MHz | 22dBm | Typical: 707ma |
| | @10MHz | 22dBm | Typical: 728ma |
| | @20MHz | 22dBm | Typical: 795 ma |
| LTE-TDD B41 | @5MHz | 21.6dBm | Typical: 803 ma |
| | @10MHz | 21.7dBm | Typical: 771 ma |
| | @20MHz | 21.7dBm | Typical: 793 ma |

5.5 ESD Notes

MODULE is sensitive to ESD in the process of storage, transporting, and assembling. When MODULE is mounted on the users' mother board, the ESD components should be placed beside the connectors which human body may touch, such as USIM card holder, audio jacks, switches, keys, etc. The following table shows the MODULE ESD measurement performance without any external ESD component.

Table 37: The ESD performance measurement table (Temperature: 25°C, Humidity: 45%)

| Part | Contact discharge | Air discharge |
|--------------|-------------------|---------------|
| VBAT,GND | +/-5K | +/-10K |
| Antenna port | +/-4K | +/-8K |
| Other PADS | +/-0.5K | +/-1K |

6 SMT Production Guide

6.1 Top and Bottom View of MODULE



Figure 39: Top and bottom view of MODULE

NOTE

The above is the design effect diagram of the module for reference. The actual appearance is subject to the actual product.

6.2 Label Information

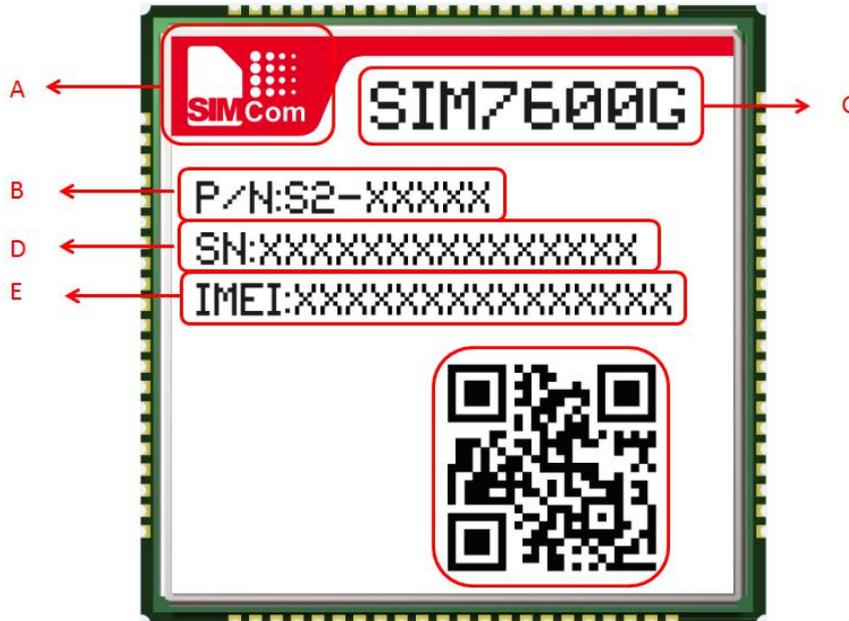


Figure 40: Label information

Table 38: The description of label information

| No. | Description |
|-----|---|
| A | LOGO |
| B | Module part number |
| C | Project name |
| D | Serial number |
| E | International mobile equipment identity |

6.3 Typical SMT Reflow Profile

SIMCom provides a typical soldering profile. Therefore the soldering profile shown below is only a generic recommendation and should be adjusted to the specific application and manufacturing constraints.

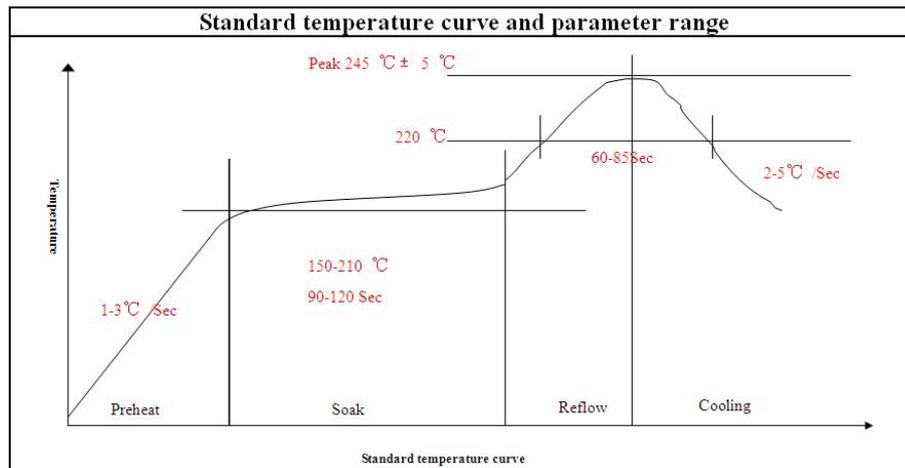


Figure 41: The ramp-soak-spike reflow profile of MODULE

NOTE

For more details about secondary SMT, please refer to the document [21].

6.4 Moisture Sensitivity Level (MSL)

MODULE is qualified to Moisture Sensitivity Level (MSL) 3 in accordance with JEDEC J-STD-033. If the prescribed time limit is exceeded, users should bake MODULE for 192 hours in drying equipment (<5% RH) at 40+5/-0°C, or 72 hours at 85+5/-5°C. Note that plastic tray is not heat-resistant, and only can be baked at 45° C.

Table 39: Moisture Sensitivity Level and Floor Life

| Moisture Sensitivity Level (MSL) | Floor Life (out of bag) at factory ambient ≤30°C/60% RH or as stated |
|----------------------------------|--|
| 1 | Unlimited at ≤30°C/85% RH |
| 2 | 1 year |
| 2a | 4 weeks |
| 3 | 168 hours |
| 4 | 72 hours |
| 5 | 48 hours |
| 5a | 24 hours |
| 6 | Mandatory bake before use. After bake, it must be reflowed within the time limit specified on the label. |

NOTE

IPC / JEDEC J-STD-033 standard must be followed for production and storage.

6.5 Stencil Foil Design Recommendation

The recommended thickness of stencil foil is more than 0.15mm.

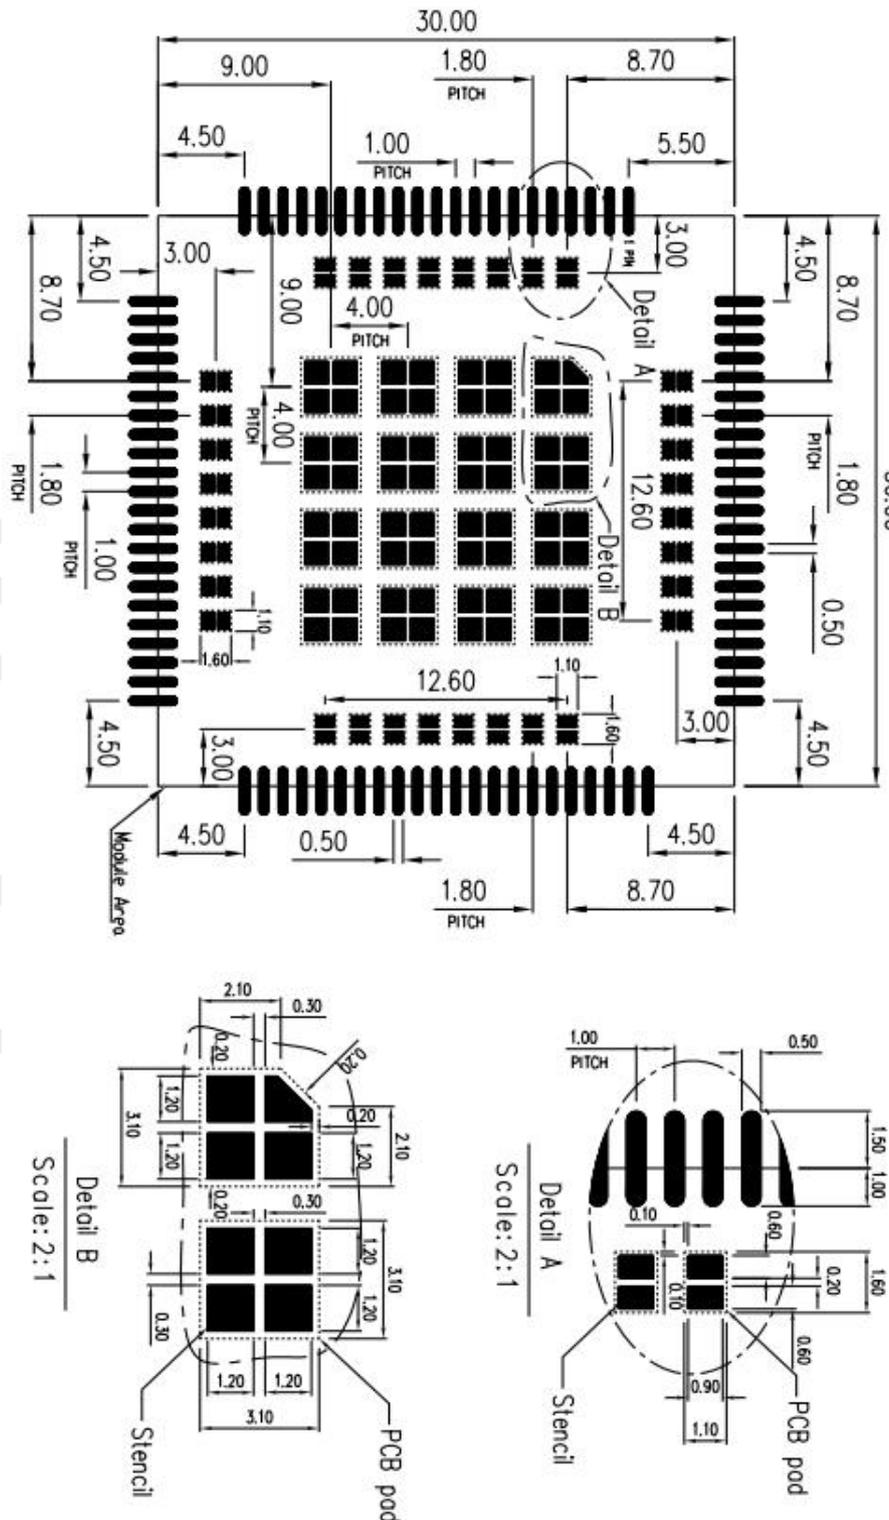


Figure 42 : Stencil Foil

7 Packaging

MODULE support tray packaging.

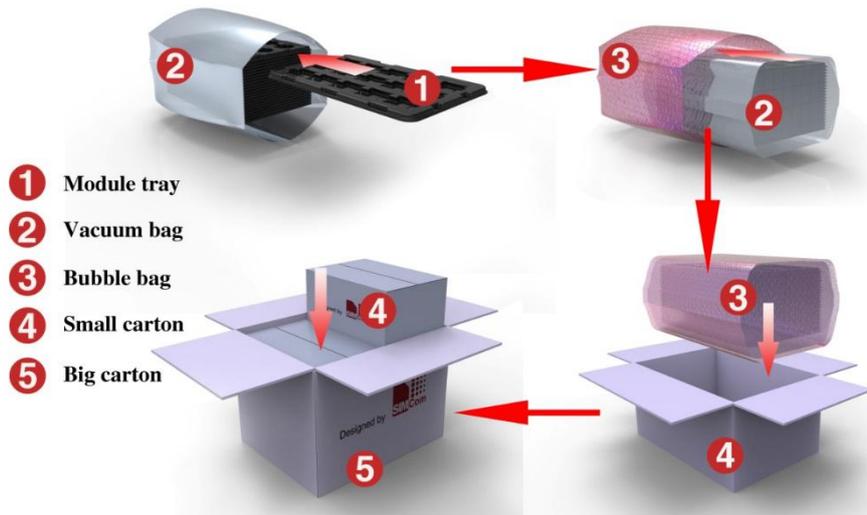


Figure 43: packaging diagram

Module tray drawing:

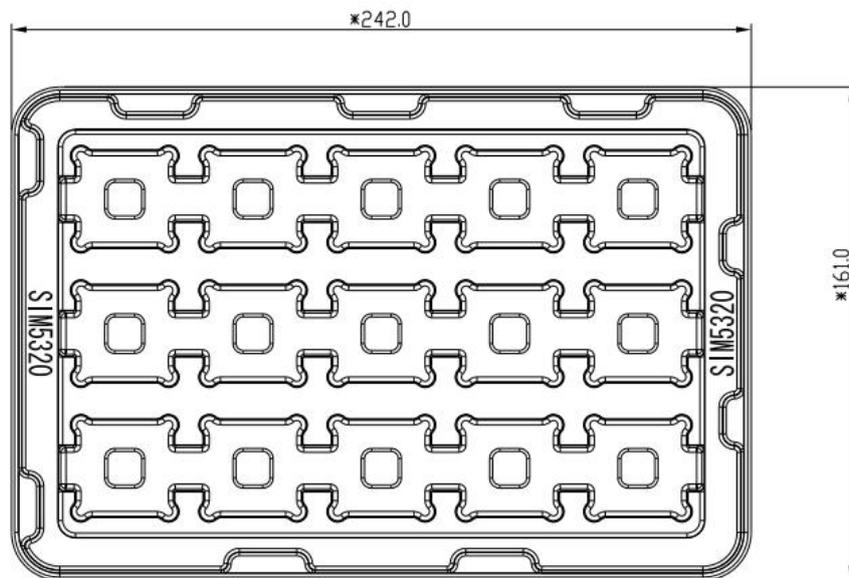


Figure 44: Tray drawing

Table 40: Tray size

| Length (±3mm) | Width (±3mm) | Number |
|-----------------|----------------|--------|
|-----------------|----------------|--------|

| | | |
|-------|-------|----|
| 242.0 | 161.0 | 15 |
|-------|-------|----|

Small carton drawing:

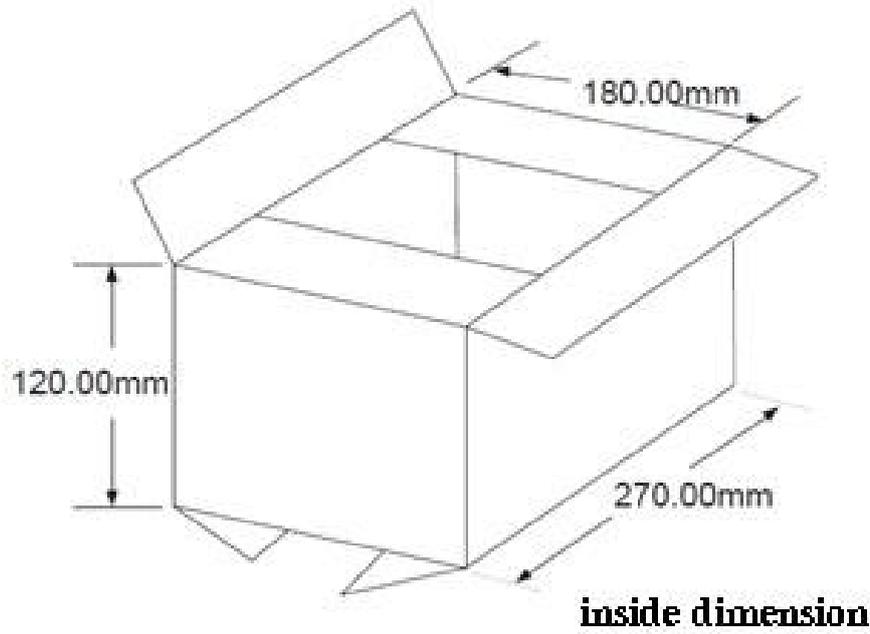


Figure 45: Small carton drawing

Table 41: Small Carton size

| Length (±10mm) | Width (±10mm) | Height (±10mm) | Number |
|------------------|-----------------|------------------|-----------|
| 270 | 180 | 120 | 15*20=300 |

Big carton drawing:

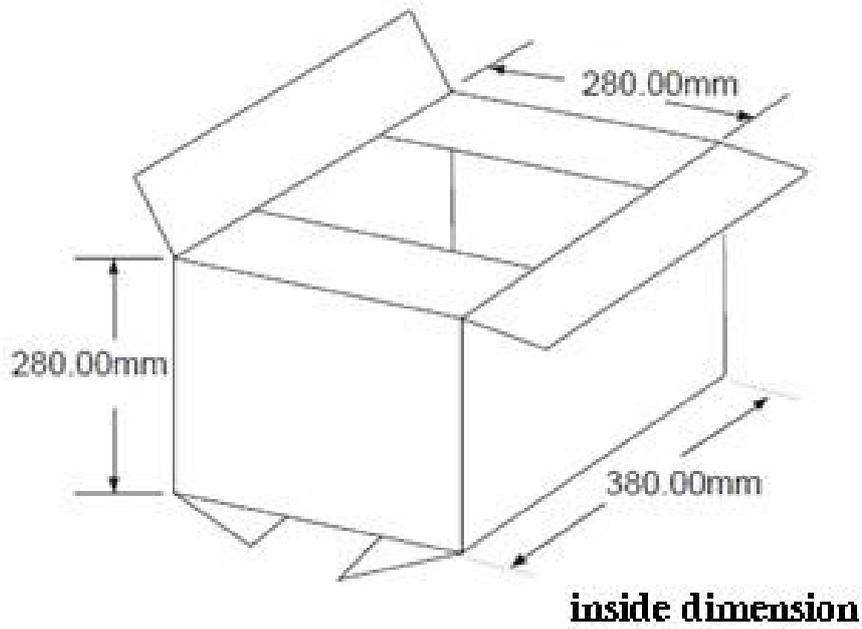


Figure 46: Big carton drawing

Table 42: Big Carton size

| Length (±10mm) | Width (±10mm) | Height (±10mm) | Number |
|------------------|-----------------|------------------|------------|
| 380 | 280 | 280 | 300*4=1200 |

8 Appendix

8.1 Coding Schemes and Maximum Net Data Rates over Air Interface

Table 43: Coding Schemes and Maximum Net Data Rates over Air Interface

| LTE-FDD device category (Downlink) | Max data rate (peak) | Modulation type |
|------------------------------------|------------------------|------------------|
| Category 1 | 10Mbps | QPSK/16QAM/64QAM |
| Category 2 | 50Mbps | QPSK/16QAM/64QAM |
| Category 3 | 100Mbps | QPSK/16QAM/64QAM |
| Category 4 | 150Mbps | QPSK/16QAM/64QAM |
| LTE-FDD device category (Uplink) | Max data rate (peak) | Modulation type |
| Category 1 | 5Mbps | QPSK/16QAM |
| Category 2 | 25Mbps | QPSK/16QAM |
| Category 3 | 50Mbps | QPSK/16QAM |
| Category 4 | 50Mbps | QPSK/16QAM |

8.2 Related Documents

Table 44: Related Documents

| NO. | Title | Description |
|-----|--|--|
| [1] | SIM7500_SIM7600 Series_AT Command Manual_V1.xx | AT Command Manual |
| [2] | ITU-T Draft new recommendationV.25ter | Serial asynchronous automatic dialing and control |
| [3] | GSM 07.07 | Digital cellular telecommunications (Phase 2+); AT command set for GSM Mobile Equipment (ME) |
| [4] | GSM 07.10 | Support GSM 07.10 multiplexing protocol |
| [5] | GSM 07.05 | Digital cellular telecommunications (Phase 2+); Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS) |

| | | |
|------|---|--|
| [6] | GSM 11.14 | Digital cellular telecommunications system (Phase 2+); Specification of the SIM Application Toolkit for the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface |
| [7] | GSM 11.11 | Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface |
| [8] | GSM 03.38 | Digital cellular telecommunications system (Phase 2+); Alphabets and language-specific information |
| [9] | GSM 11.10 | Digital cellular telecommunications system (Phase 2) ; Mobile Station (MS) conformance specification ; Part 1: Conformance specification |
| [10] | 3GPP TS 51.010-1 | Digital cellular telecommunications system (Release 5); Mobile Station (MS) conformance specification |
| [11] | 3GPP TS 34.124 | Electromagnetic Compatibility (EMC) for mobile terminals and ancillary equipment. |
| [12] | 3GPP TS 34.121 | Electromagnetic Compatibility (EMC) for mobile terminals and ancillary equipment. |
| [13] | 3GPP TS 34.123-1 | Technical Specification Group Radio Access Network; Terminal conformance specification; Radio transmission and reception (FDD) |
| [14] | 3GPP TS 34.123-3 | User Equipment (UE) conformance specification; Part 3: Abstract Test Suites. |
| [15] | Radio | ETSI EN 301 908-1 V13.1.1 (2019); ETSI EN 301 V13.1.1(2020);ETSI EN 301 908-13 V13.1.1(2019); ETSI 413V1.1.1(2017) |
| [16] | EMC | ETSI EN 301 489-1 V2.2.3 (2019);EN 301 489-52 V1.1.0 (2016); ETSI EN301 489-19V2.1.1(2019) |
| [17] | Safety | EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013 |
| [18] | Health | EN 62311:2008 |
| [19] | 3GPP TS 51.010-1 | Digital cellular telecommunications system (Release 5); Mobile Station (MS) conformance specification |
| [20] | GCF-CC V3.23.1 | Global Certification Forum - Certification Criteria |
| [21] | 2002/95/EC | Directive of the European Parliament and of the Council of 27 January 2003 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) |
| [22] | Module secondary-SMT-UGD-V1.xx | Module secondary SMT Guidelines |
| [23] | SIM7X00 Series_UART_Application Note_V1.xx | This document describes how to use UART interface of SIMCom modules. |
| [24] | SIM7100_SIM7500_SIM7600 Series_USB AUDIO_Application Note_V1.xx | USB AUDIO Application Note |
| [25] | SIM7X00 Series_GPS_Application Note_V1.xx | GPS Application Note |
| [26] | Antenna design guidelines for diversity receiver system | Antenna design guidelines for diversity receiver system |
| [27] | SIM7100_SIM7500_SIM7600_Sleep Mode_Application Note_V1.xx | Sleep Mode Application Note |
| [28] | 7600CE-LAN-Reference | HSIC Application Note |

| | | |
|------|---|------------------------|
| | Design V1.0 | |
| [29] | SIM7600_Series_SGMII-Reference_Design_V1.00 | SGMII Reference Design |

8.3 Terms and Abbreviations

Table 45: Terms and Abbreviations

| Abbreviation | Description |
|--------------|---|
| ADC | Analog-to-Digital Converter |
| ARP | Antenna Reference Point |
| BER | Bit Error Rate |
| BTS | Base Transceiver Station |
| CS | Coding Scheme |
| CSD | Circuit Switched Data |
| CTS | Clear to Send |
| DAC | Digital-to-Analog Converter |
| DRX | Discontinuous Reception |
| DSP | Digital Signal Processor |
| DTE | Data Terminal Equipment (typically computer, terminal, printer) |
| DTR | Data Terminal Ready |
| DTX | Discontinuous Transmission |
| EFR | Enhanced Full Rate |
| EGSM | Enhanced GSM |
| EMC | Electromagnetic Compatibility |
| ESD | Electrostatic Discharge |
| ETS | European Telecommunication Standard |
| EVDO | Evolution Data Only |
| FCC | Federal Communications Commission (U.S.) |
| FD | SIM fix dialing phonebook |
| FDMA | Frequency Division Multiple Access |
| FR | Full Rate |
| GMSK | Gaussian Minimum Shift Keying |
| GNSS | Global Navigation Satellite System |
| GPRS | General Packet Radio Service |
| GPS | Global Positioning System |
| GSM | Global Standard for Mobile Communications |
| HR | Half Rate |
| HSPA | High Speed Packet Access |
| I2C | Inter-Integrated Circuit |
| IMEI | International Mobile Equipment Identity |

| | |
|--------|---|
| LTE | Long Term Evolution |
| MO | Mobile Originated |
| MS | Mobile Station (GSM engine), also referred to as TE |
| MT | Mobile Terminated |
| NMEA | National Marine Electronics Association |
| PAP | Password Authentication Protocol |
| PBCCH | Packet Switched Broadcast Control Channel |
| PCB | Printed Circuit Board |
| PCS | Personal Communication System, also referred to as GSM 1900 |
| RF | Radio Frequency |
| RMS | Root Mean Square (value) |
| RTC | Real Time Clock |
| SIM | Subscriber Identification Module |
| SMS | Short Message Service |
| SPI | serial peripheral interface |
| SMPS | Switched-mode power supply |
| TDMA | Time Division Multiple Access |
| TE | Terminal Equipment, also referred to as DTE |
| TX | Transmit Direction |
| UART | Universal Asynchronous Receiver & Transmitter |
| VSWR | Voltage Standing Wave Ratio |
| SM | SIM phonebook |
| NC | Not connect |
| EDGE | Enhanced data rates for GSM evolution |
| HSDPA | High Speed Downlink Packet Access |
| HSUPA | High Speed Uplink Packet Access |
| ZIF | Zero intermediate frequency |
| WCDMA | Wideband Code Division Multiple Access |
| VCTCXO | Voltage control temperature-compensated crystal oscillator |
| USIM | Universal subscriber identity module |
| UMTS | Universal mobile telecommunications system |
| UART | Universal asynchronous receiver transmitter |

8.4 Safety Caution

Table 46: Safety Caution

| Marks | Requirements |
|---|--|
|  | When in a hospital or other health care facility, observe the restrictions about the use of mobiles. Switch the cellular terminal or mobile off, medical equipment may be sensitive and not operate normally due to RF energy interference. |
|  | Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Forgetting to think much of these instructions may impact the flight safety, or offend local legal action, or both. |
|  | Do not operate the cellular terminal or mobile in the presence of flammable gases or fumes. Switch off the cellular terminal when you are near petrol stations, fuel depots, chemical plants or where blasting operations are in progress. Operation of any electrical equipment in potentially explosive atmospheres can constitute a safety hazard. |
|  | Your cellular terminal or mobile receives and transmits radio frequency energy while switched on. RF interference can occur if it is used close to TV sets, radios, computers or other electric equipment. |
|  | Road safety comes first! Do not use a hand-held cellular terminal or mobile when driving a vehicle, unless it is securely mounted in a holder for hands free operation. Before making a call with a hand-held terminal or mobile, park the vehicle. |
|  | <p>GSM cellular terminals or mobiles operate over radio frequency signals and cellular networks and cannot be guaranteed to connect in all conditions, especially with a mobile fee or an invalid SIM card. While you are in this condition and need emergent help, please remember to use emergency calls. In order to make or receive calls, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.</p> <p>Some networks do not allow for emergency call if certain network services or phone features are in use (e.g. lock functions, fixed dialing etc.). You may have to deactivate those features before you can make an emergency call.</p> <p>Also, some networks require that a valid SIM card be properly inserted in the cellular terminal or mobile.</p> |

Antenna requirements

1. Antenna List:

Type: Dipole antenna with non-standard SMA connector(50ohm);

Model: MF25D

Antenna Gain:

Band 2:1.87dBi, Band 4:3.12dBi, Band 5:0.91dBi, Band 12:0.95dBi,
Band13:2.23dBi, Band 25:1.87dBi, Band 26:0.91dBi, Band 41:2.9dBi,
Band 66:3.12dBi



2. The user must match the MF25D antenna with the non-standard SMA connector and cannot change the antenna.

This device is intended only for OEM integrators under the following conditions: (For module device use)

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes:

(Pour utilisation de dispositif module)

- 1) L'antenne doit être installée de telle sorte qu'une distance de 20 cm est respectée entre l'antenne et les utilisateurs, et
- 2) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne. Tant que les 2 conditions ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The modular can be installed or integrated in mobile or fix devices only. This modular cannot be installed in any portable device.

FCC Radiation Exposure Statement

This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This modular must be installed and operated with a minimum distance of 20 cm between the radiator and user body.

If the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains Transmitter Module FCC ID: 2AJYU-8PYA007 Or Contains FCC ID: 2AJYU-8PYA007"

When the module is installed inside another device, the user manual of the host must contain below warning statements;

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The devices must be installed and used in strict accordance with the manufacturer's instructions as described in the user documentation that comes with the product.

Any company of the host device which install this modular with limit modular approval should perform the test of radiated emission and spurious emission according to FCC Part 22H and 24E, 47 CFR Part 2, 22H, 24(E), 27 and 47 CFR Part 2, 22H, 24(E), 27, 90 requirement, Only if the test result comply with FCC Part 22H and 24E, 47 CFR Part 2, 22H, 24(E), 27 and 47 CFR Part 2, 22H, 24(E), 27, 90 requirement, then the host can be sold legally.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The modular can be installed or integrated in mobile or fix devices only. This modular cannot be installed in any portable device.

IC Radiation Exposure Statement

This modular complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This modular must be installed and operated with a minimum distance of 20 cm between the radiator and user body.

For a host manufacture's using a certified modular, if (1) the module's IC number is not visible when installed in the host, or (2) if the host is marketed so that end users do not have straightforward commonly used methods for access to remove the module so that the IC number of the module is visible; then an additional permanent label referring to the enclosed module: "Contains Transmitter Module IC: " 23761-8PYA008" or "Contains IC: 23761-8PYA008" must be used.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Le modular peut être installé ou intégré dans un mobile ou réparer une seule chose Installation dans n'importe quel appareil portable.

Déclaration de rayonnement IC

Ce modular complies avec des radiations émettrices de rayonnement Environnement. Ceci ne doit pas être co-localisé ou opérer avec des autres Ce modular doit être installé et obtenu avec une distance minimale de 20 cm entre les radiateurs et le corps de l'utilisateur.

Pour un hôte, on utilise un modular, si (1) le numéro de module est non visible Quand on est installé dans le serveur, or (2) si le propriétaire est commercialisé Straightforward commonly used for the access to remove travail so that the number IC en vue Le module est visible; Ensuite, le label permanent a été attribué au module: "Contient le Module IC:" 23761-8PYA008" ou "contenu IC: 23761-8PYA008" doit" be use